MANITOWOC ICE
2110 SOUTH 26TH STREET, MANITOWOC, WI 54220

800-545-5720
WWW.MANITOWOCICE.COM

Instruction Sheet

K00497 Touchless Lever Activated Ice Chute

CONVERT PUSH FOR ICE TO TOUCHLESS

1. Disconnect the power from the dispenser by unplugging the power cord from the electrical outlet.
2. Using a phillips head screwdriver, remove the two screws located on both sides of the ice chute.




3. With the screws out remove the front panel by grasping both sides and pulling towards you until it is clear of the ice chute, then pull the panel up and out.




4. Remove the metal outer bracket clip, then use your thumbs to spread the bracket and unhinge the ice chute from the bracket pins.




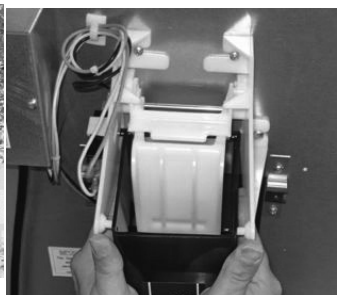


5. Lift the door lock and rotate the ice chute clockwise while pulling towards you in a slightly downward motion to complete removal.

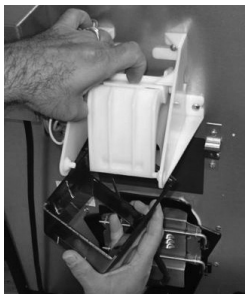

6. Put the new ice chute into place by lifting the door lock and door lock assembly. Rotate the chute counter clockwise in an up and away from you motion, but do not snap the bracket pins into place. Rest the chute on top of the pins. This is so you can angle the longer chute through the chute opening as you put the front panel back on the dispenser.

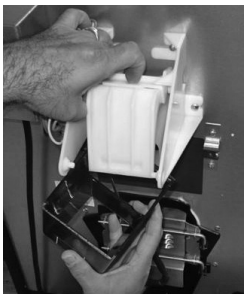

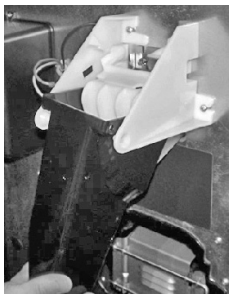

7. Place the bottom edge of the front panel on the lower brackets of the dispenser so that the front panel can be put back into position with a “scissor” like motion while simultaneously angling the ice chute through the front panel opening.





8. Return the front panel to its “in place” position and slide the chute through the opening, but do not push the front panel all the way back as shown below.





9. Working from the front opening you can now align the ice chute with the bracket pins and snap into place.



10. With the Touchless ice chute now snapped into the bracket pins, replace the bracket clip across the front of the chute bracket by reaching through the front panel opening and snap into place.



11. With the bracket clip in place the Touchless ice chute is now secured. The front panel can now be pushed all the way into place.
12. Once the front panel is pushed all the way back into it’s final position, replace the two screws on both sides of the Touchless ice chute.



13. Plug unit back in for operation.
14. Test the operation of the dispenser by pushing ice chute to dispense ice.