Manitowoc REPLACEMENT PART

83-6904-9

FLOAT VALVE W/INSTRUCTIONS

TAG - FLOAT VALVE
Installation Instructions


FOR USE ON ALL MANITOWOC 100, 150, 200, 250, 320, 420, 450, 600, 1100, AND 2200 SERIES ICE MACHINES.
EXCEPTION: DO NOT USE ON C-0200, C-0400, B-0600, OR J-0600.

If the float valve assembly is to be installed on a slotted mounting bracket, loosen the splash shield and slide the valve in place. The splash shield is to be hand-tightened only.

If the float valve is to be installed on a non-slotted mounting bracket, disassemble the float valve by removing the float and splash shield. CAUTION: When the cotter pin is removed, the float and plunger assembly will fall out. Install valve in bracket and hand-tighten splash shield to valve. Reassemble plunger and float. Note direction of plunger.

The splash shield on the float valve may interfere with the mounting brackets on some ice machines. On these ice machines, remove the splash shield and assemble the float valve on the mounting bracket with the stainless steel locknut provided - open cotter pin to secure.

NOTE: After installation, check for free movement of float. If it touches side water trough or drain stub, bend arm slightly and recheck for free movement.

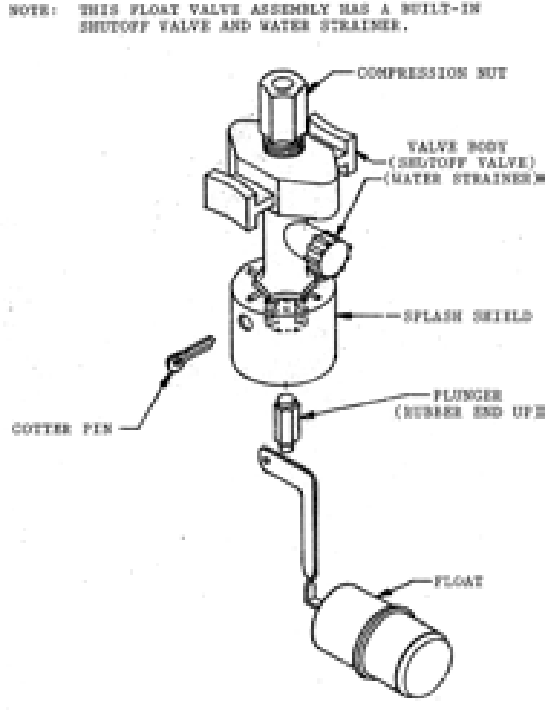

Manitowoc Ice, Inc.
2110 South 26 Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, other: 920-683-7879
Web Site - www.manitowocice.com

8002483
Rev 02