
7620253 WATER CURTAIN ADJUSTMENT

Instructions

1. Initially set switch activating pin “X” dimension at 1/4”.
2. Pull water curtain away from evaporator, and while slowly returning the water curtain to its free position, the switch must actuate (hear a click), when bottom edge of the water curtain is even with or up to 3/16” inside the front edge of the water trough. NOTE: One turn on the switch activating pin corresponds to 1/8” movement at the bottom of the water curtain.
3. Tighten locking nut on switch activating pin.
4. Check the water curtain for free movement and final position.

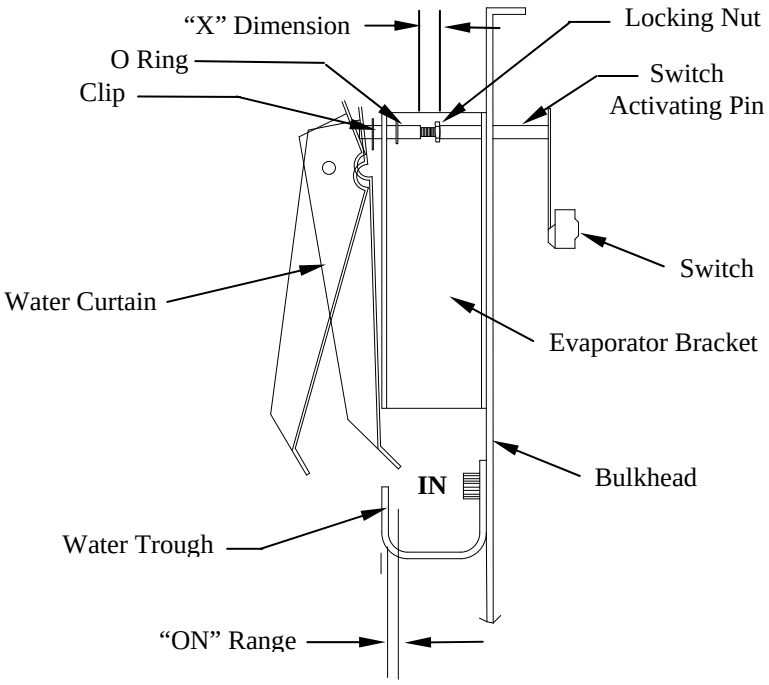

`

Manitowoc Ice, Inc.
2110 South 26 Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com

8003233
Rev. 04/30/99