
Replacement Air Compressor
Installation Instructions

1. Disconnect electrical power to the ice machine.
2. Remove panels.
3. Disconnect air tubing and electrical connection from air compressor.
4. Remove defective air compressor housing and brackets. Retain wire/tubing standoff for replacement.
5. Using the new bracket as a template, drill 5/32" holes maximum ½" deep into bulkhead to mount the air compressor. **Warning: Do not drill through the bulkhead into the evaporator compartment.**
6. Attach air compressor to ice machine with two screws.
7. Attach air tubing and electrical.

Air Compressor for 48" Ice Machines
Note: 30" Ice Machines have only one air compressor

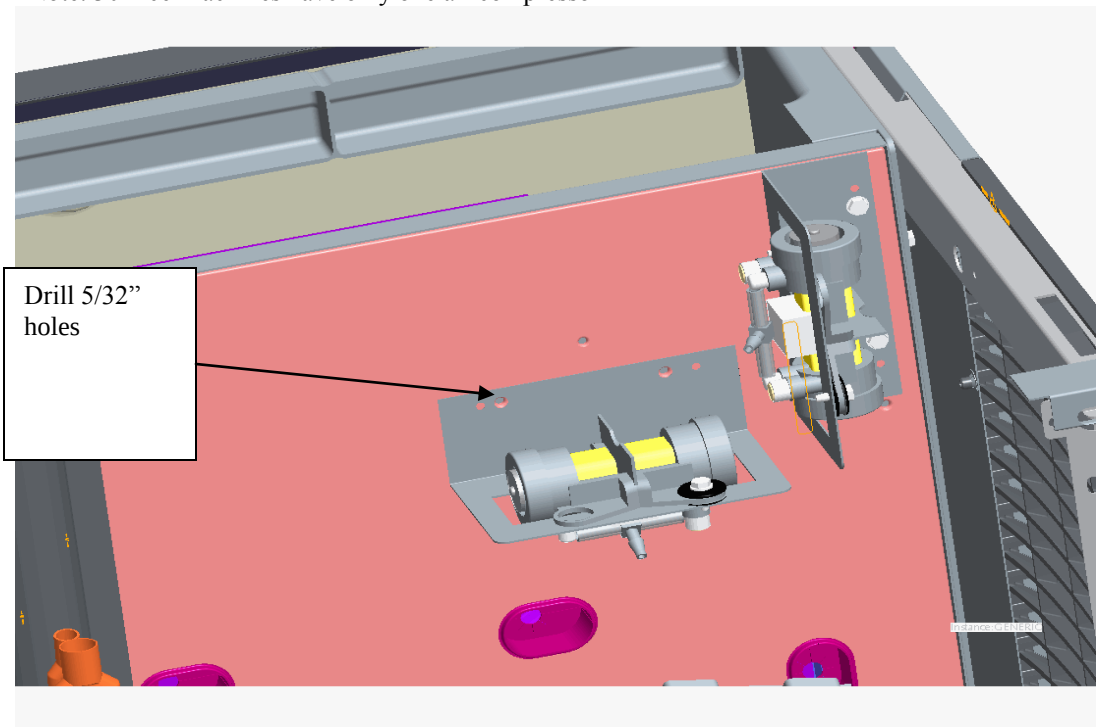

Manitowoc Ice
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com