
I-SERIES ICE MACHINES
REMOTE 1 PHASE

CAUTION: DISCONNECT POWER BEFORE WORKING ON ELECTRICAL CIRCUITRY.

SEE SERIAL PLATE FOR VOLTAGE

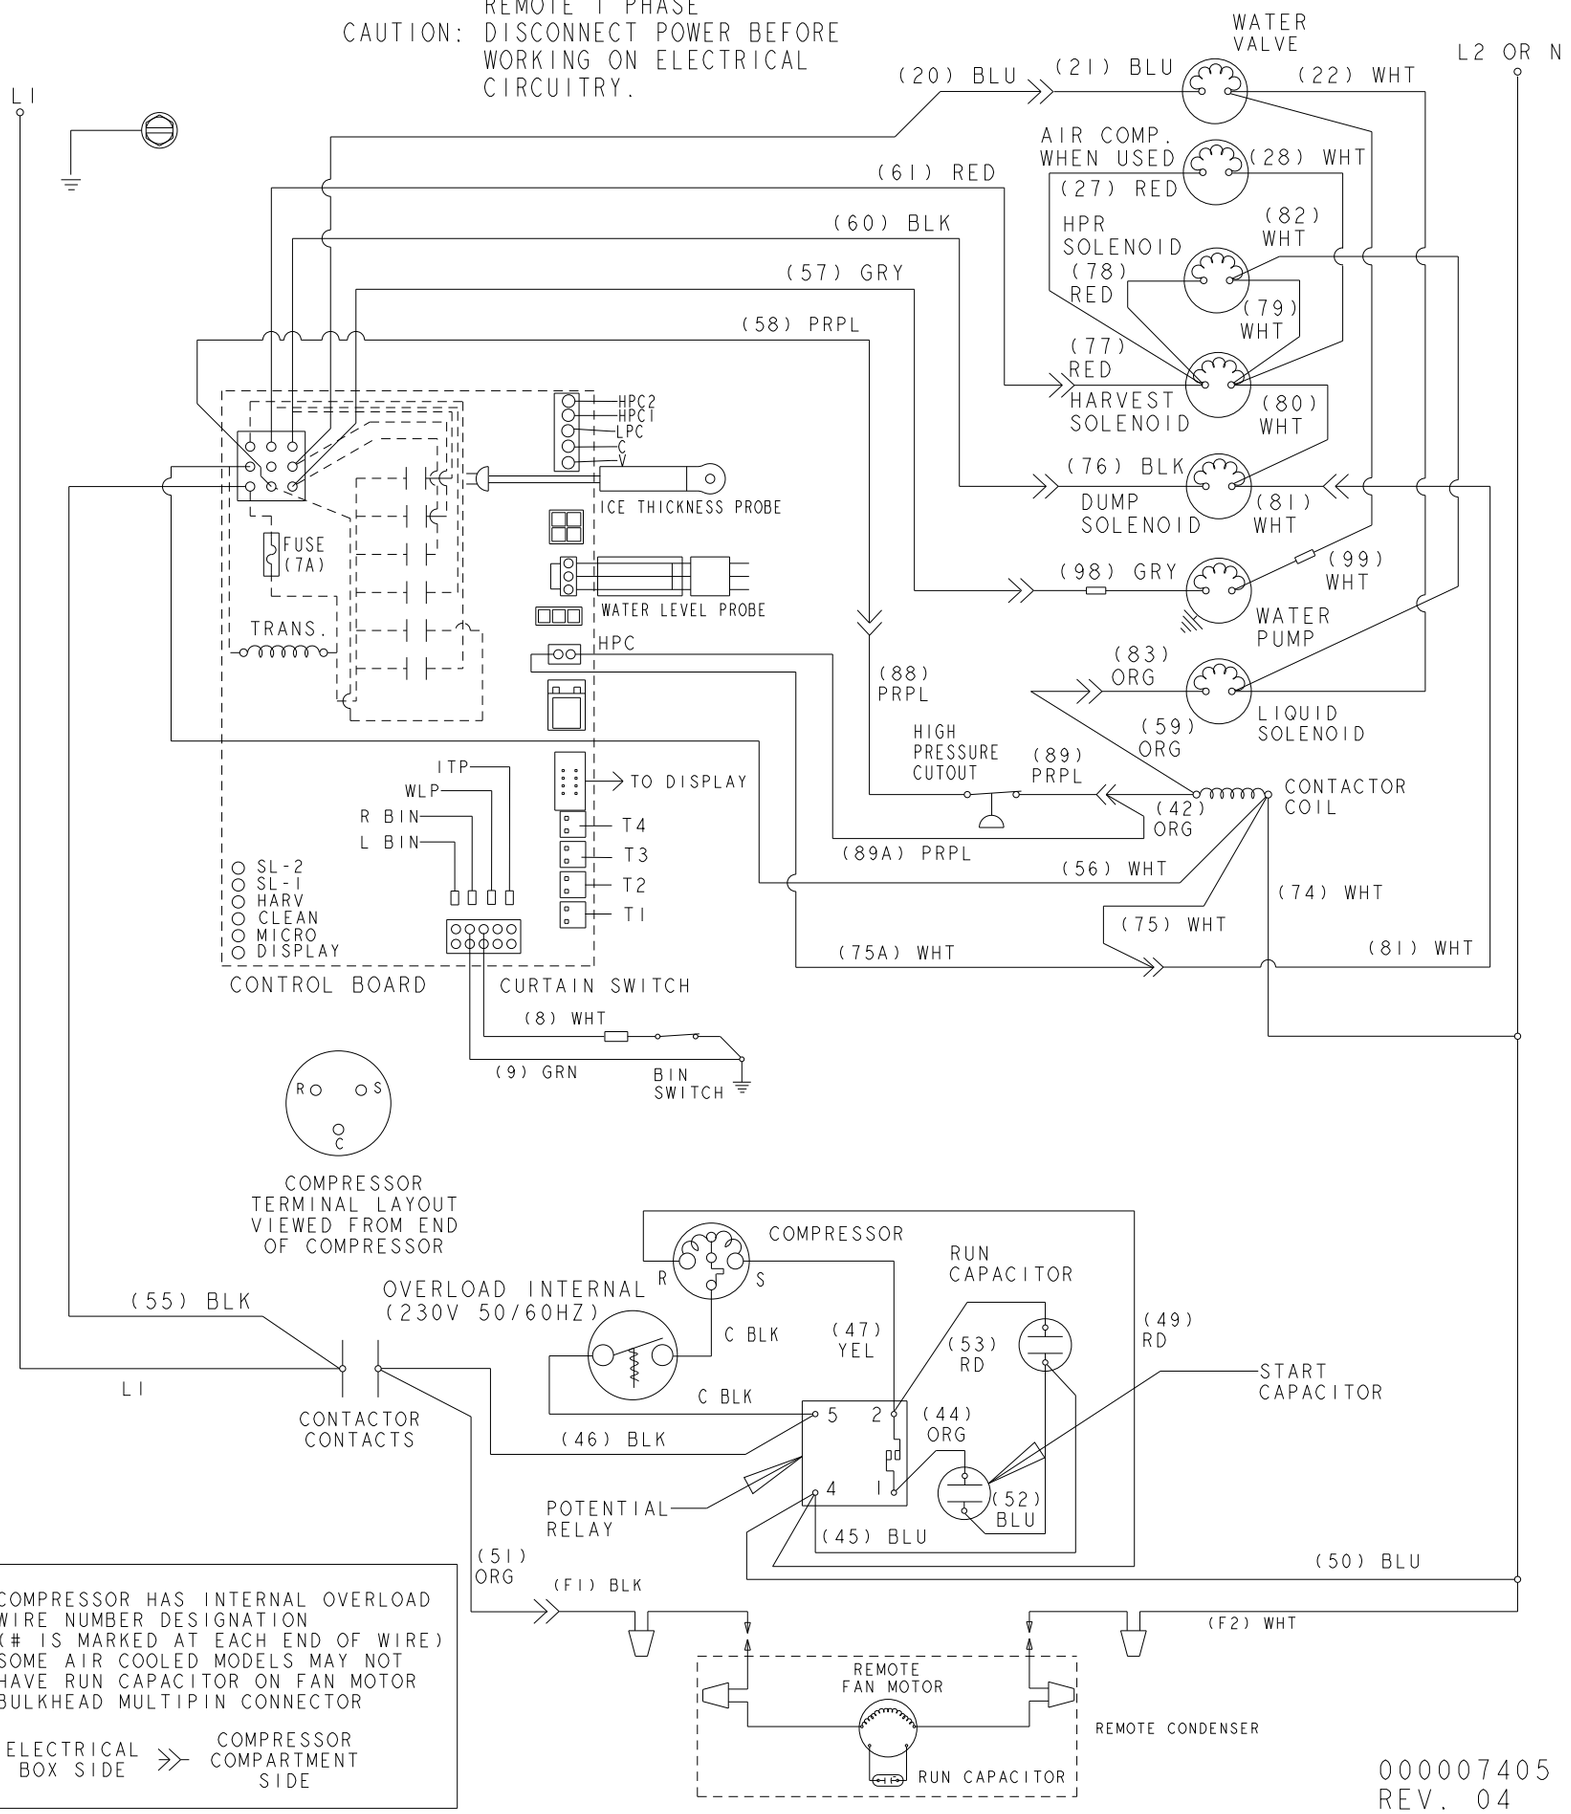

* - COMPRESSOR HAS INTERNAL OVERLOAD
( ) - WIRE NUMBER DESIGNATION (# IS MARKED AT EACH END OF WIRE)
** - SOME AIR COOLED MODELS MAY NOT HAVE RUN CAPACITOR ON FAN MOTOR
>>- BULKHEAD MULTIPIN CONNECTOR

ELECTRICAL BOX SIDE >>- COMPRESSOR COMPARTMENT SIDE

000007405
REV. 04