

I-SERIES ICE MACHINES
QUIETQUBE I PHASE
CAUTION: DISCONNECT POWER BEFORE WORKING ON ELECTRICAL CIRCUITRY.

SEE SERIAL PLATE FOR VOLTAGE

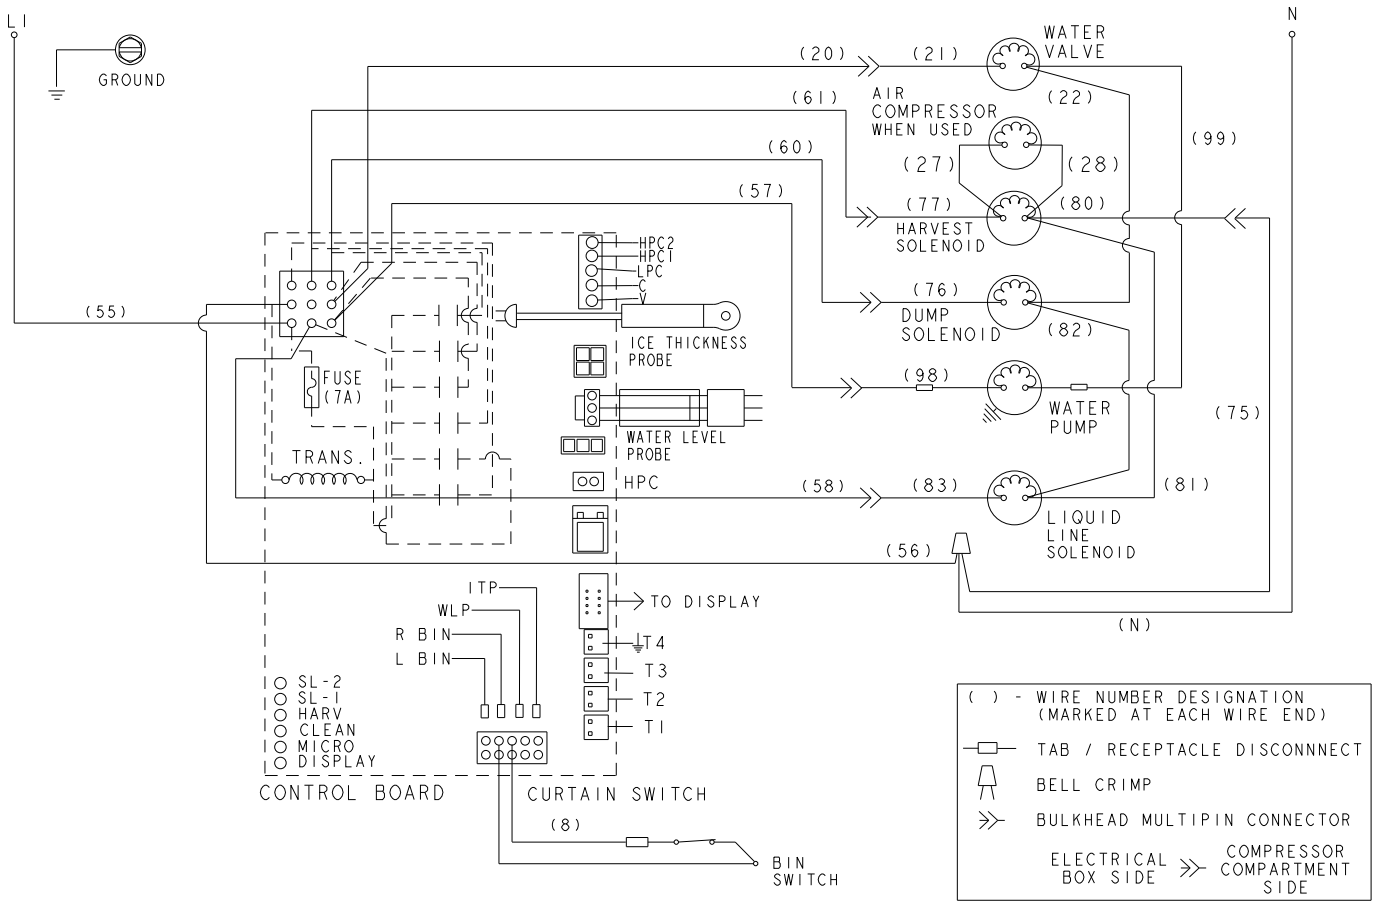


COOL VAPOR DEFROST
CONDENSING UNIT 208-230/60/1 & 230/50/1
CAUTION: DISCONNECT POWER BEFORE WORKING ON ELECTRICAL CIRCUITRY
DIAGRAM SHOWN DURING FREEZE CYCLE

SEE SERIAL PLATE FOR VOLTAGE

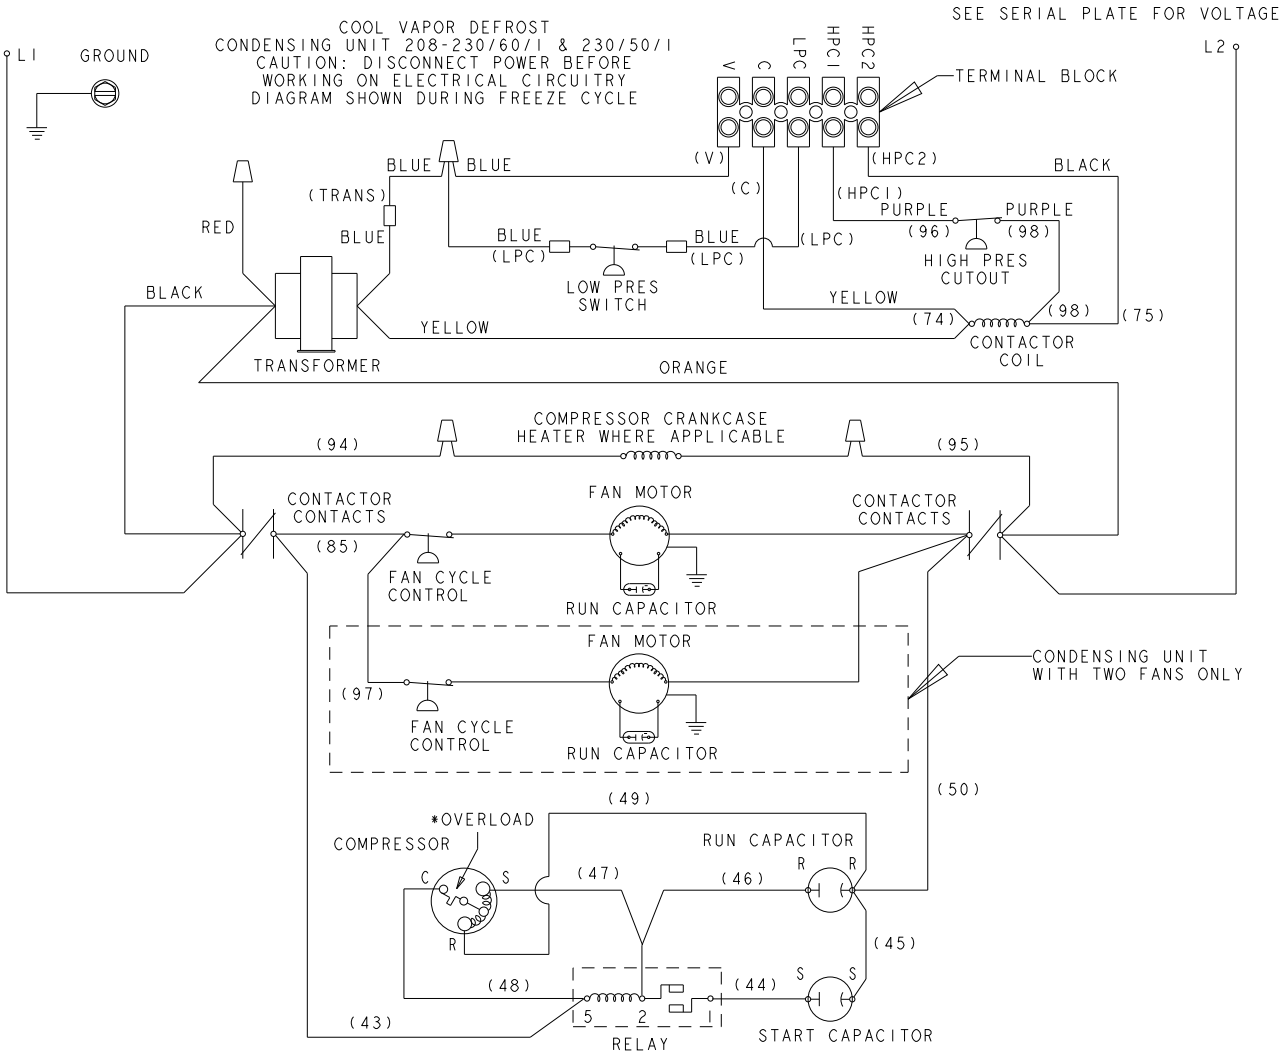

COOL VAPOR DEFROST
CONDENSING UNIT 208-230/60/3
CAUTION: DISCONNECT POWER BEFORE WORKINGON ELECTRICAL CIRCUITRY
DIAGRAM SHOWN DURING FREEZE CYCLE

SEE SERIAL PLATE FOR VOLTAGE

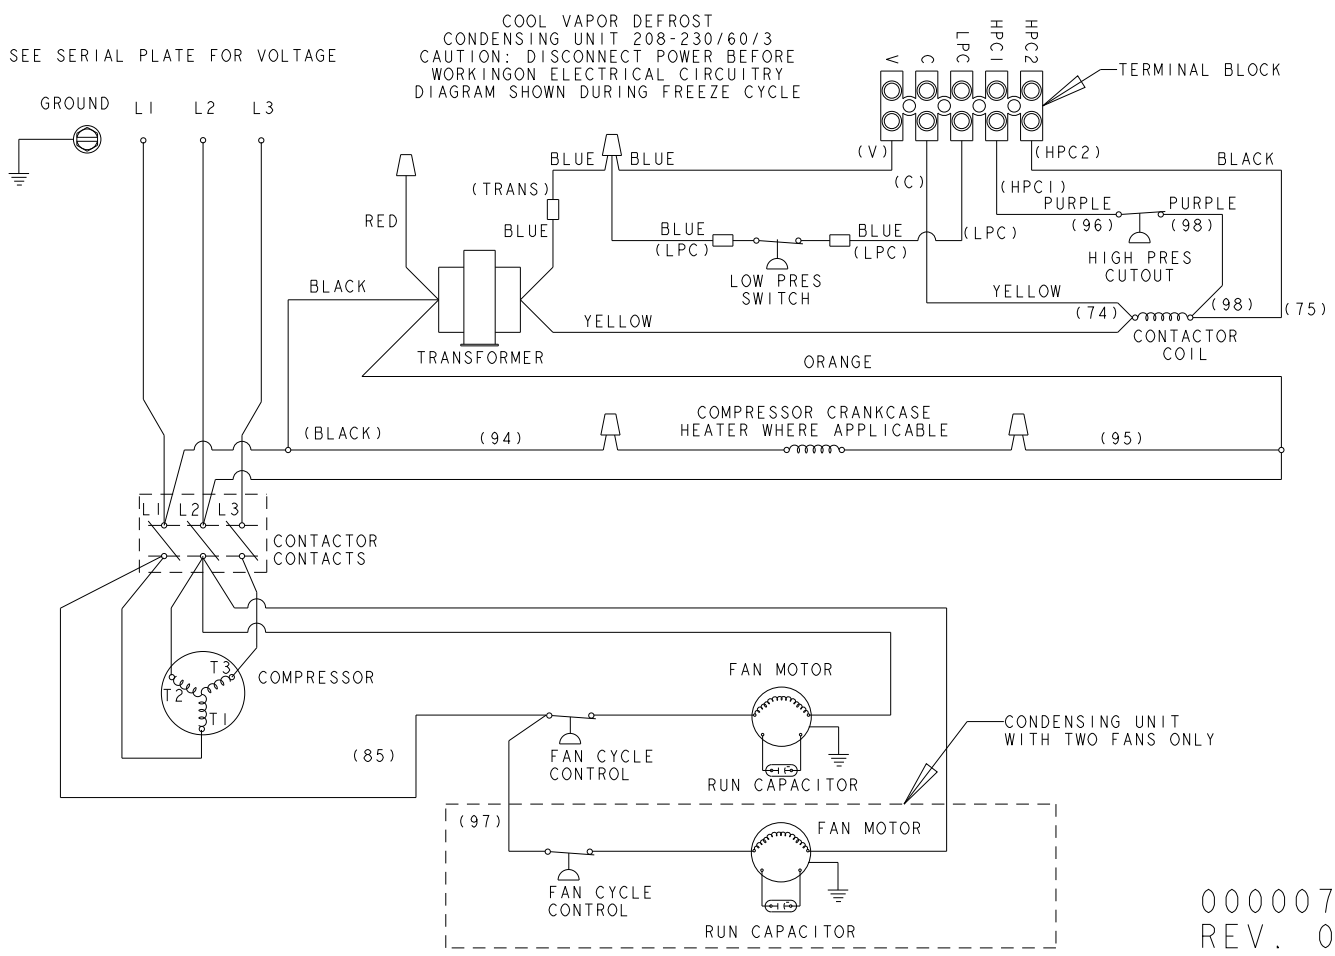

000007605
REV. 05