
I-SERIES ICE MACHINES
REMOTE 1 PHASE
CAUTION: DISCONNECT POWER BEFORE WORKING ON ELECTRICAL CIRCUITRY.

SEE SERIAL PLATE FOR VOLTAGE

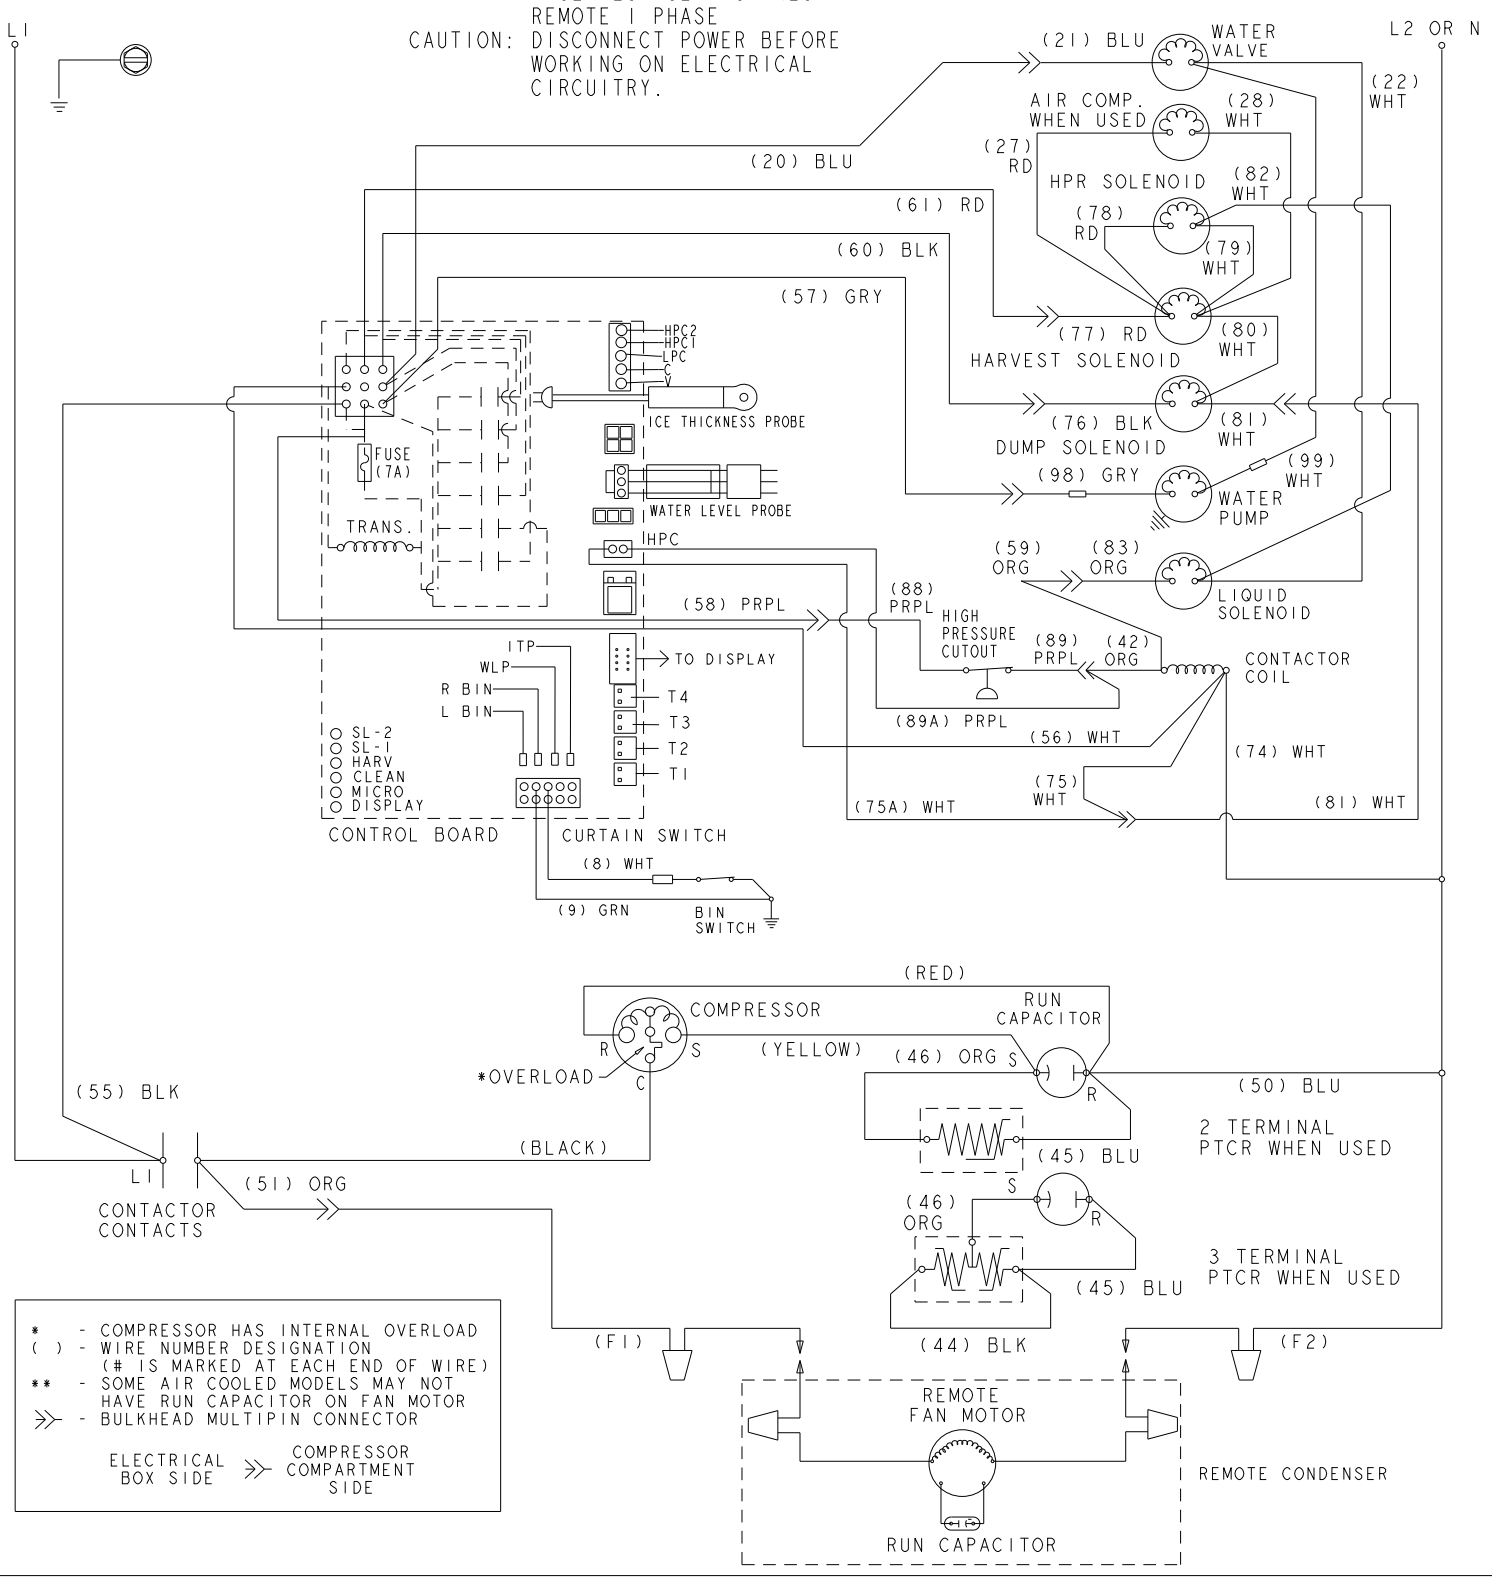


* - COMPRESSOR HAS INTERNAL OVERLOAD
( ) - WIRE NUMBER DESIGNATION (# IS MARKED AT EACH END OF WIRE)
** - SOME AIR COOLED MODELS MAY NOT HAVE RUN CAPACITOR ON FAN MOTOR
⟩⟩⟨ - BULKHEAD MULTIPIN CONNECTOR

ELECTRICAL BOX SIDE ⟩⟩⟨ COMPRESSOR COMPARTMENT SIDE

I-SERIES ICE MACHINES
REMOTE 3 PHASE
CAUTION: DISCONNECT POWER BEFORE WORKING ON ELECTRICAL CIRCUITRY.

SEE SERIAL PLATE FOR VOLTAGE

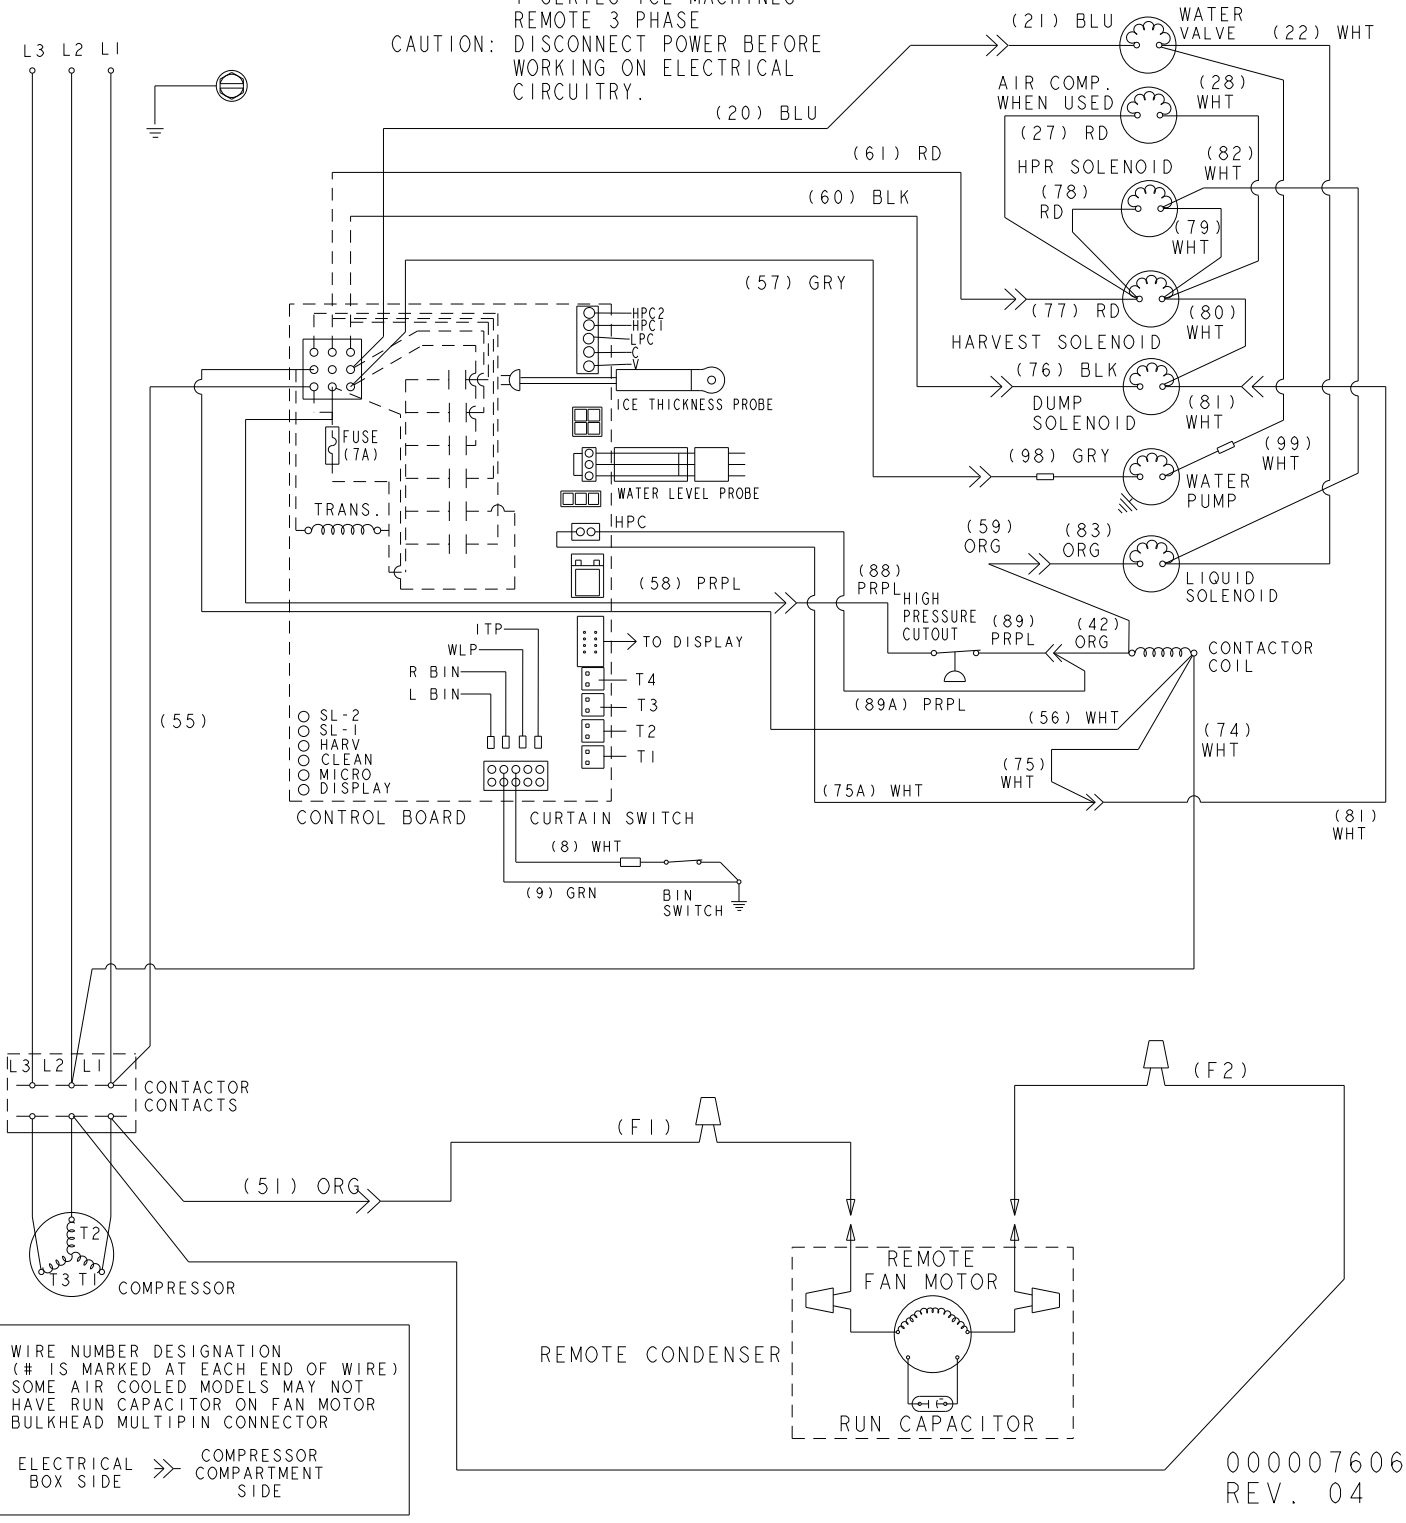

( ) - WIRE NUMBER DESIGNATION (# IS MARKED AT EACH END OF WIRE)
** - SOME AIR COOLED MODELS MAY NOT HAVE RUN CAPACITOR ON FAN MOTOR
⟩⟩⟨ - BULKHEAD MULTIPIN CONNECTOR

ELECTRICAL BOX SIDE ⟩⟩⟨ COMPRESSOR COMPARTMENT SIDE

000007606
REV. 04