
IB-SERIES ICE MACHINES
QUIETQUBE I PHASE
CAUTION: DISCONNECT POWER BEFORE WORKING ON ELECTRICAL CIRCUITRY.


SEE SERIAL PLATE FOR VOLTAGE

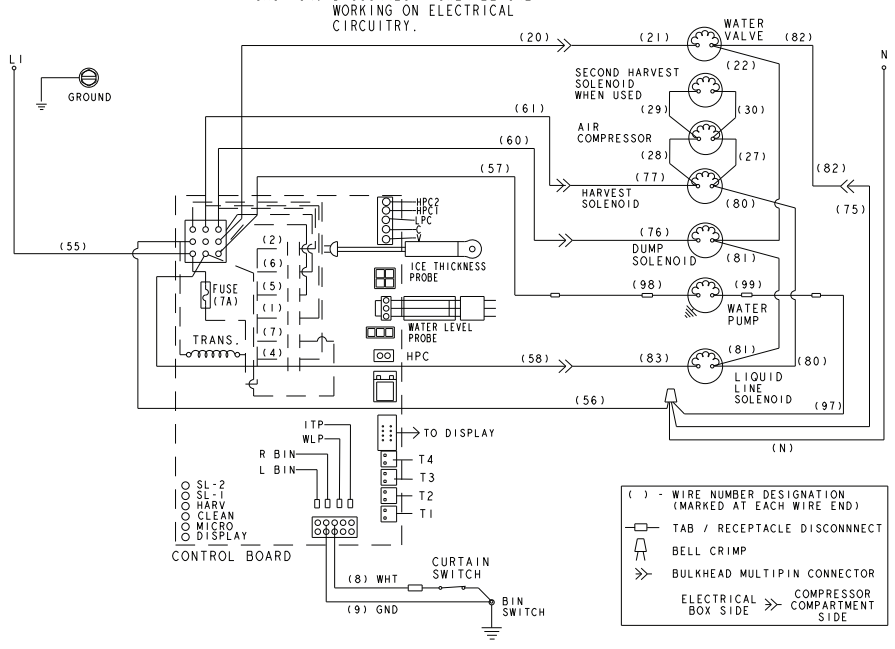

( ) - WIRE NUMBER DESIGNATION (MARKED AT EACH WIRE END)
TAB / RECEPTACLE DISCONNNECT
BELL CRIMP
BULKHEAD MULTIPIN CONNECTOR
ELECTRICAL BOX SIDE — COMPRESSOR COMPARTMENT SIDE

COOL VAPOR DEFROST
CONDENSING UNIT 208-230/60/1 & 230/50/1
CAUTION: DISCONNECT POWER BEFORE WORKING ON ELECTRICAL CIRCUITRY
DIAGRAM SHOWN DURING FREEZE CYCLE

SEE SERIAL PLATE FOR VOLTAGE

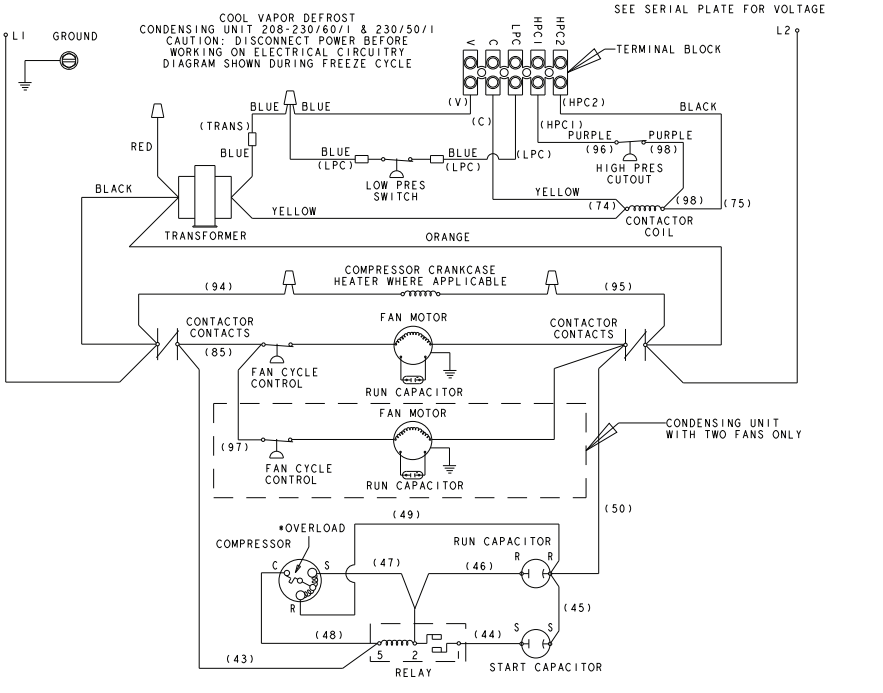

COOL VAPOR DEFROST
CONDENSING UNIT 208-230/60/3
CAUTION: DISCONNECT POWER BEFORE WORKINGON ELECTRICAL CIRCUITRY
DIAGRAM SHOWN DURING FREEZE CYCLE

SEE SERIAL PLATE FOR VOLTAGE

