
1-ICE MACHINES
SELF-CONTAINED 1 PHASE

CAUTION: DISCONNECT POWER BEFORE WORKING ON ELECTRICAL CIRCUITRY.

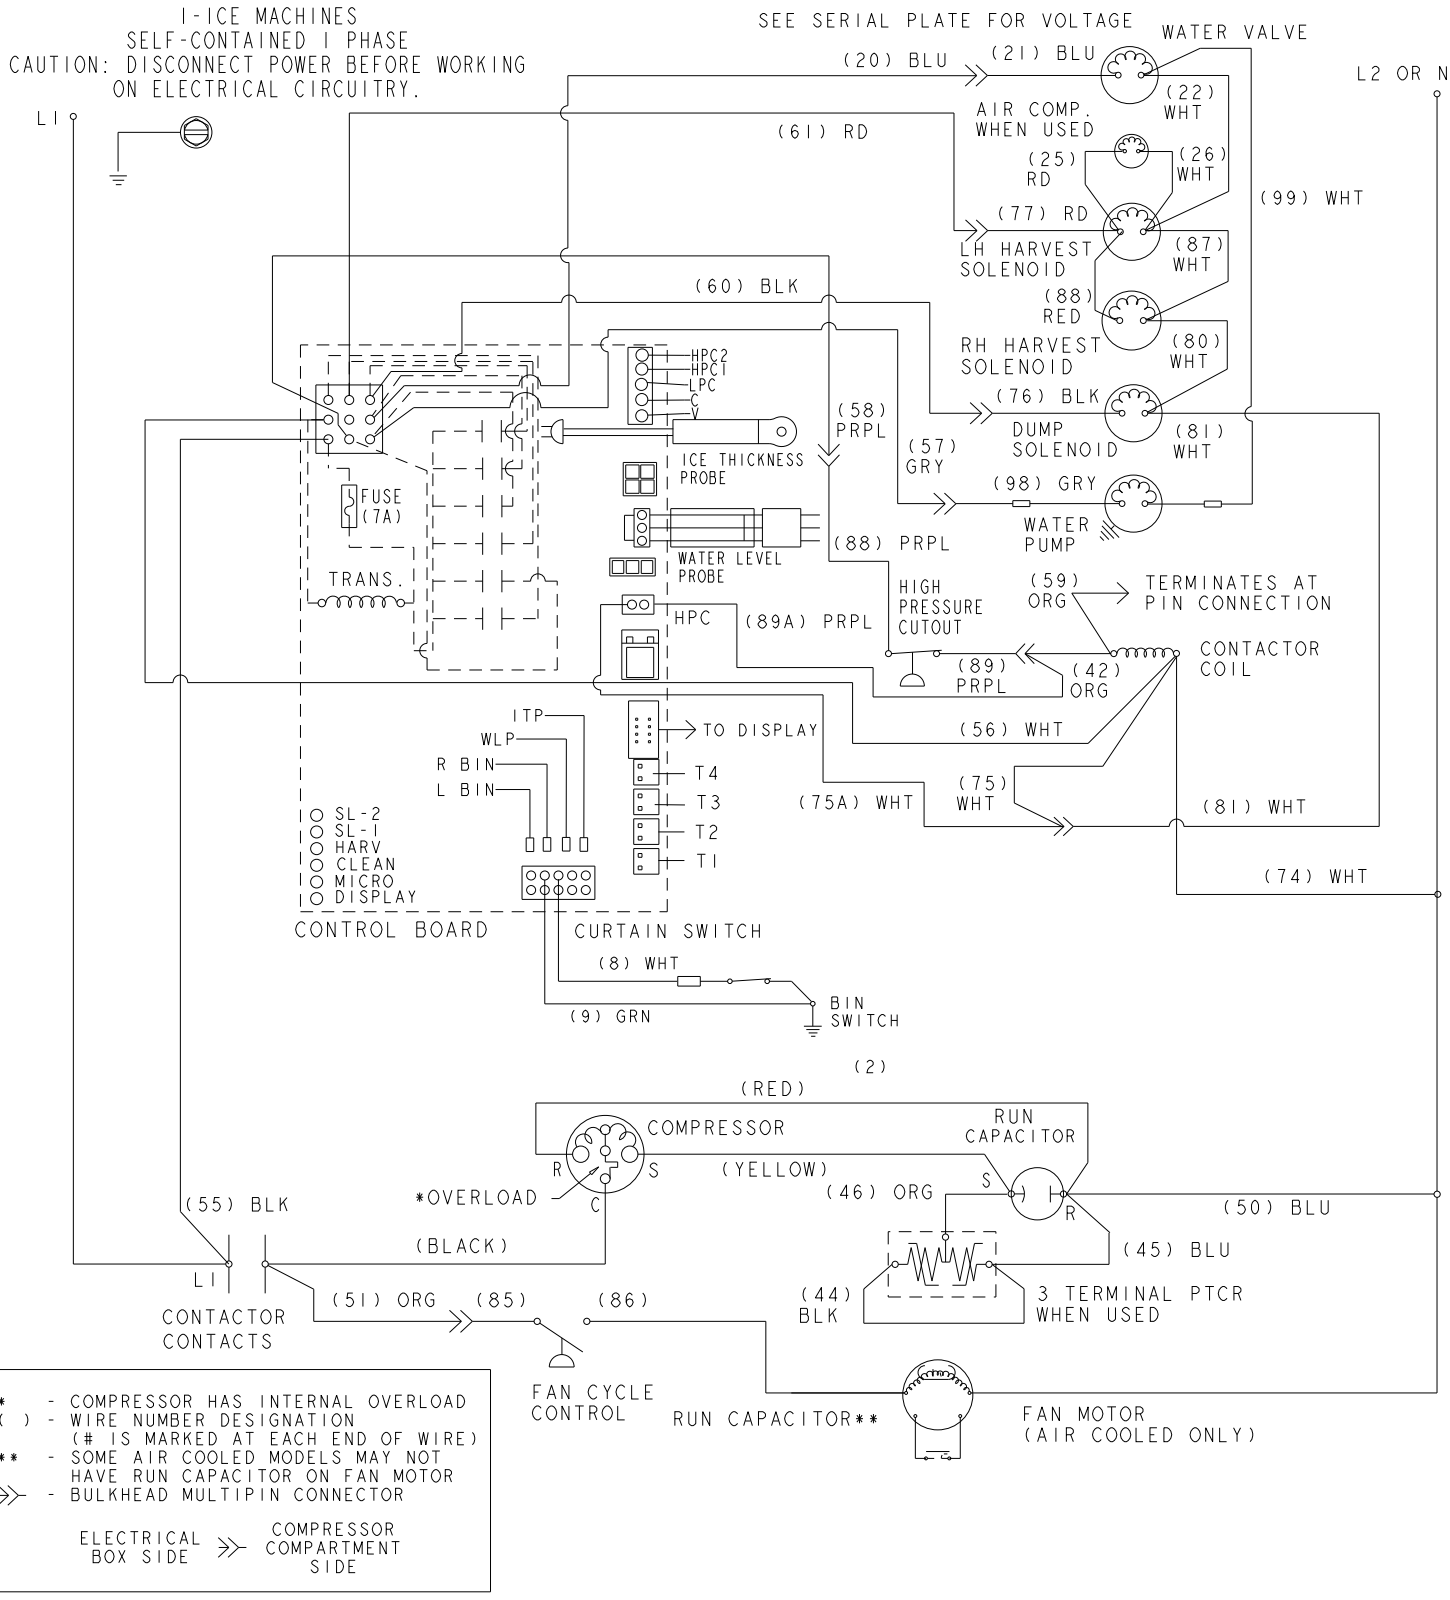


* - COMPRESSOR HAS INTERNAL OVERLOAD
( ) - WIRE NUMBER DESIGNATION (# IS MARKED AT EACH END OF WIRE)
** - SOME AIR COOLED MODELS MAY NOT HAVE RUN CAPACITOR ON FAN MOTOR
⋙ - BULKHEAD MULTIPIN CONNECTOR

ELECTRICAL BOX SIDE ⋙ COMPRESSOR COMPARTMENT SIDE

1-ICE MACHINES
SELF-CONTAINED 3 PHASE

CAUTION: DISCONNECT POWER BEFORE WORKING ON ELECTRICAL CIRCUITRY.

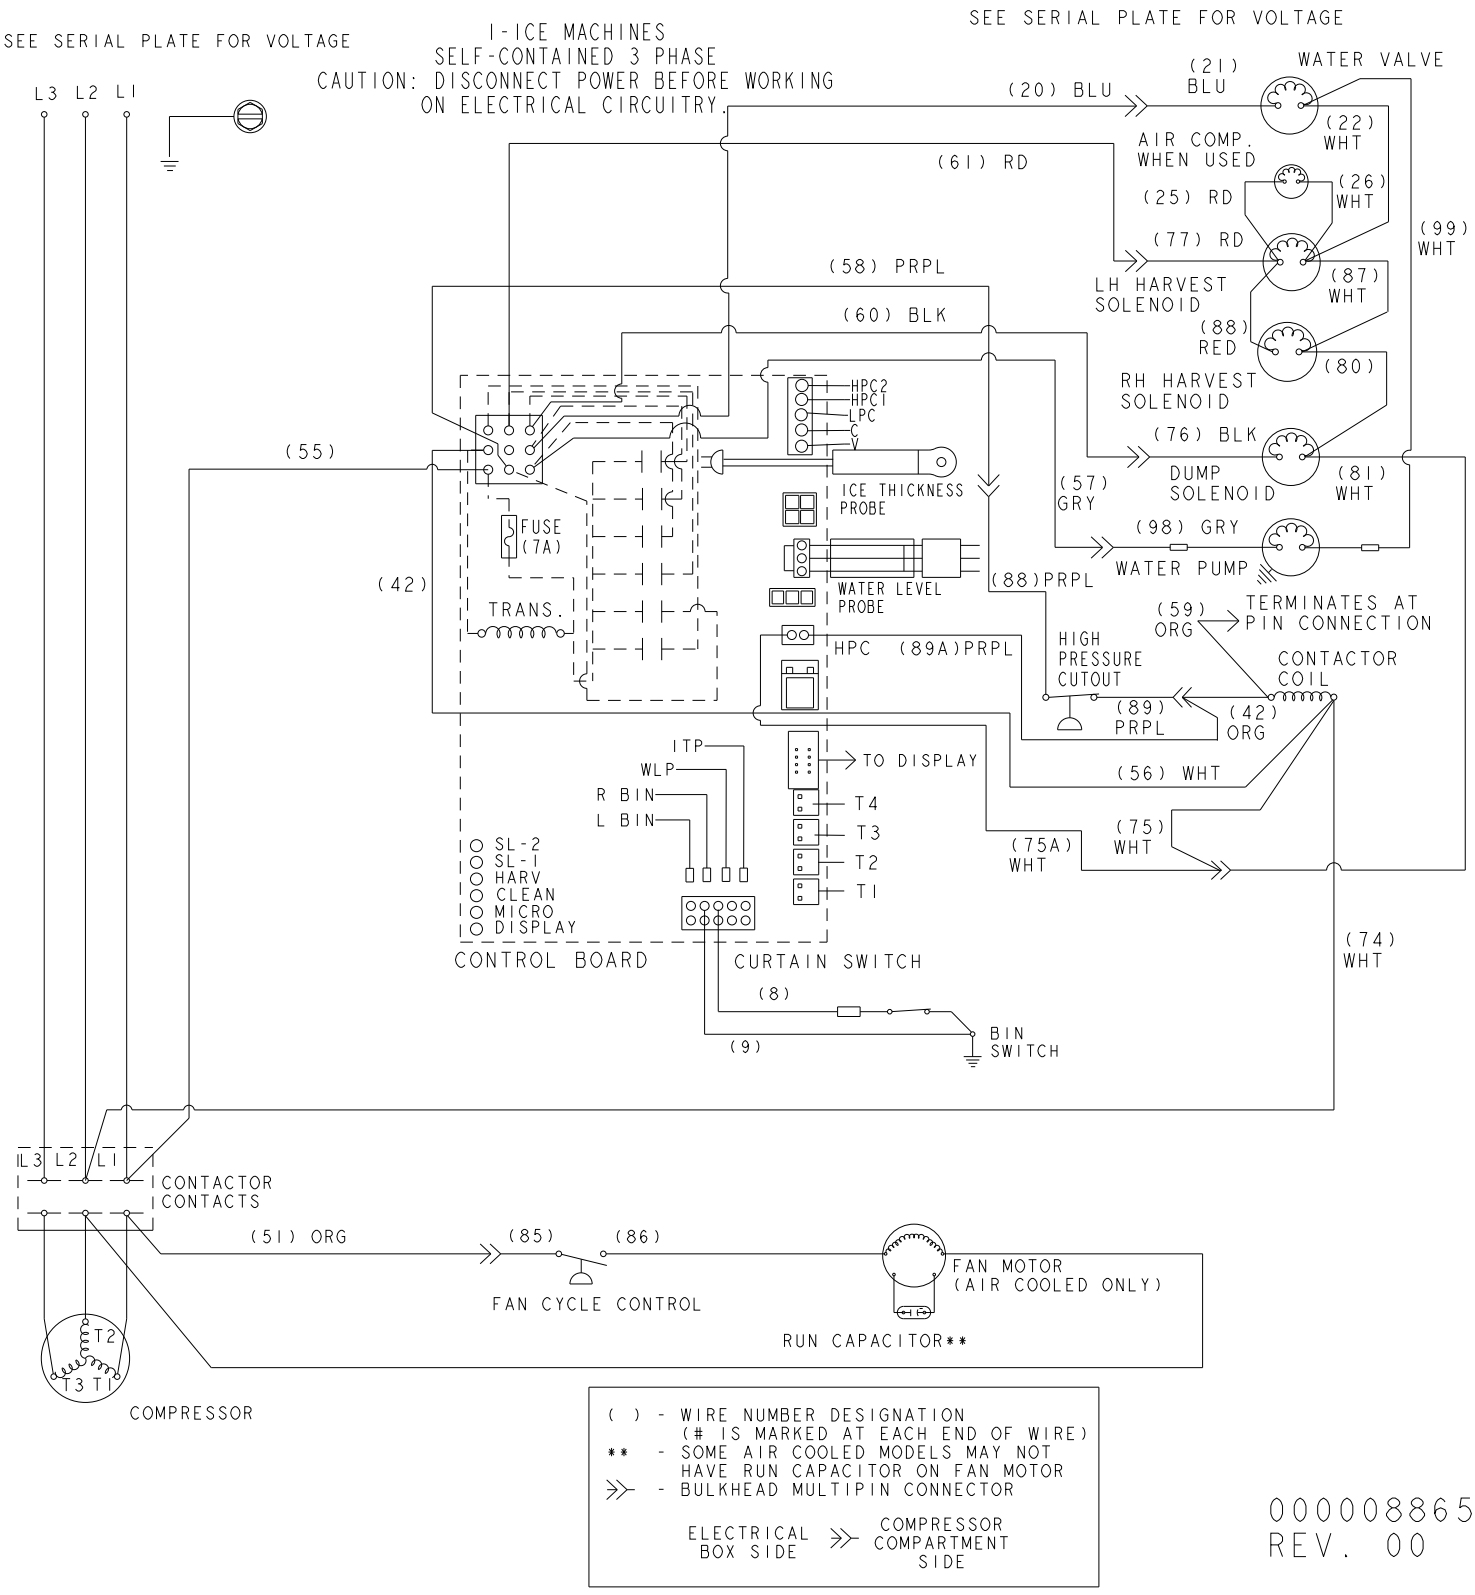

( ) - WIRE NUMBER DESIGNATION (# IS MARKED AT EACH END OF WIRE)
** - SOME AIR COOLED MODELS MAY NOT HAVE RUN CAPACITOR ON FAN MOTOR
⋙ - BULKHEAD MULTIPIN CONNECTOR

ELECTRICAL BOX SIDE ⋙ COMPRESSOR COMPARTMENT SIDE

000008865
REV. 00