
WIRING DIAGRAM FOR C-0200
SERIES CUBER 115V. 60 HZ, 50HZ
1 PHASE AIR AND WATER
SHOWN AT BEGINNING OF ICE MAKING CYCLE,
LOW PRESSURE CONTROL NORMALLY OPEN
FAN OR AIR MODELS ONLY

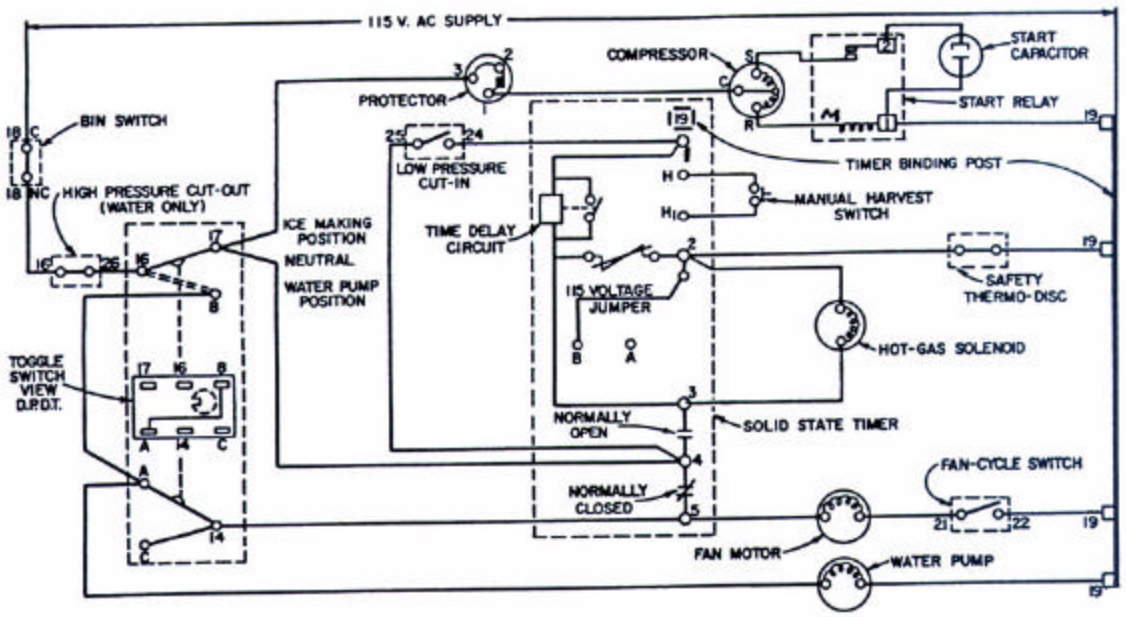

WIRING DIAGRAM FOR C-0400
SERIES CUBER 115V. 60 HZ, 50 HZ
1 PHASE AIR AND WATER
SHOWN AT BEGINNING OF ICE MAKING CYCLE
LOW PRESSURE CONTROL NORMALLY OPEN
FAN ON AIR MODELS ONLY

