
RF2378C/RFS2378C QUIETQUBE HEAD SECTION

Refer to Nameplate for Voltage Rating

Connections

- A, B, & C connect to a remote panel when used - Jumper must be removed when remote panel is used
- 1 & 2 connect to line voltage
- 3 & 4 energize remote condensing unit - 2 Amp max

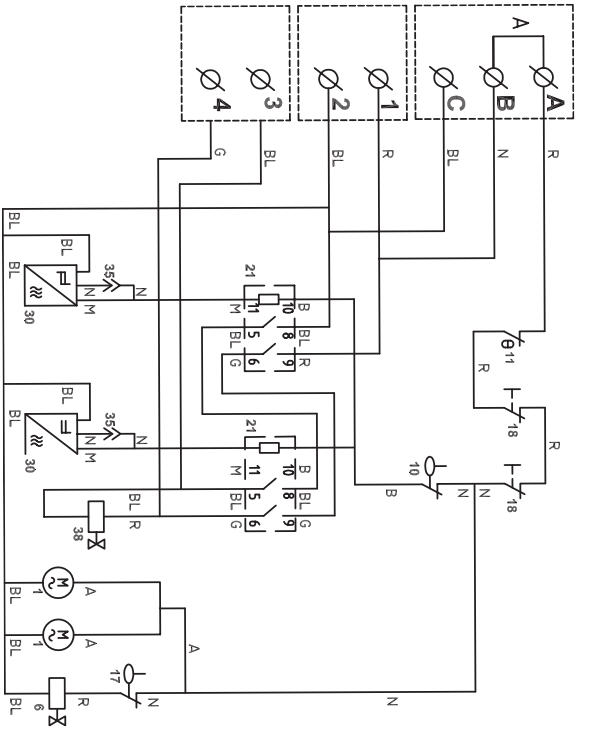

WIRING DIAGRAM LEGEND RF2300C/RFS2300 HEAD SECTION

1	Gear Motor
6	Water inlet valve
10	Low water level safety
11	Bin thermostat
17	Water level switch
18	Ice chute safety switch
21	Compressor Relay
24	On/Off switch
30	Rotation sensor
35	Compressor time delay by-pass
38	Solenoid Valve
Wire Color Designation	
B	White
BL	Blue
G	Grey
M	Brown
N	Black
R	Red
A	Orange