
RFF0620A AIR-COOLED

Refer to Nameplate for Voltage Rating

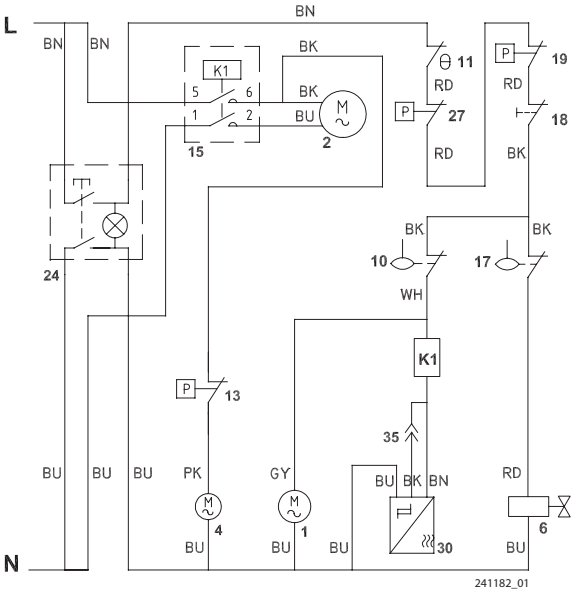

See page 144 for compressor start component wiring.

Wiring Diagram Legend RFF0620A Air-cooled

1	Gear motor
2	Compressor
4	Fan motor
6	Water inlet valve
10	Low water level switch
11	Bin thermostat
13	Fan cycle control
15	Contactor
17	Water level switch
18	Chute safety switch
19	High pressure safety switch
24	On/Off switch
27	Low pressure safety switch
30	Rotation sensor
35	Compressor time delay by-pass
Wire Color Designation	
WH	White
BU	Blue
GY	Grey
BN	Brown
BK	Black
RD	Red
PK	Pink