
RFF2500A AIR-COOLED

Refer to Nameplate for Voltage Rating

Connections

- A & B connect to a remote panel when used - Jumper must be removed when remote panel is used
- C & D energize a remote alarm indication when used

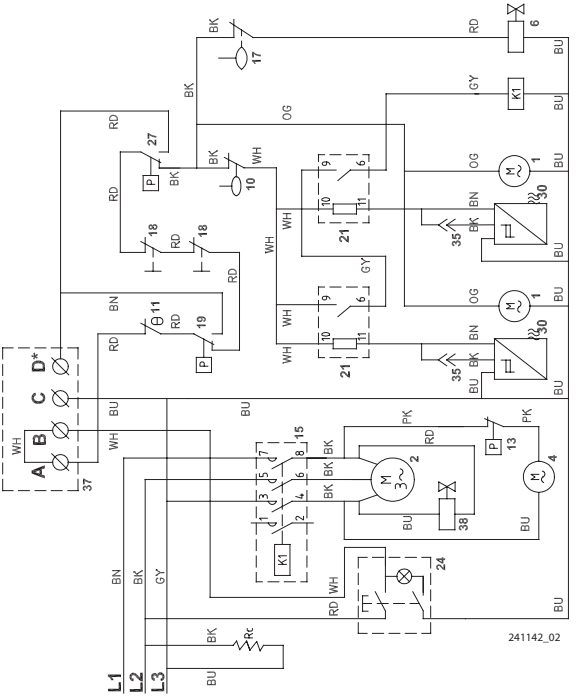

See page 144 for compressor start component wiring.

Wiring Diagram Legend RFF2500A Air-Cooled

1	Gear motor
2	Compressor
4	Condenser fan motor
6	Water inlet valve
10	Low water level safety
11	Bin thermostat
13	Fan cycle control
15	Contactor
17	Water level switch
18	Ice chute safety switch
19	High pressure safety switch
21	Compressor relay
24	On/Off switch
25	Compressor time delay
27	Low pressure cut out
29	Compressor time delay relay
30	Rotation sensor
35	Compressor time delay by-pass
37	Remote indicator panel terminals
38	Solenoid valve
Rc	Compressor crankcase heater
Wire Color Designation	
WH	White
BU	Blue
GY	Grey
BN	Brown
BK	Black
RD	Red
PK	Pink