
RNF1100A AIR-COOLED

Refer to Nameplate for Voltage Rating

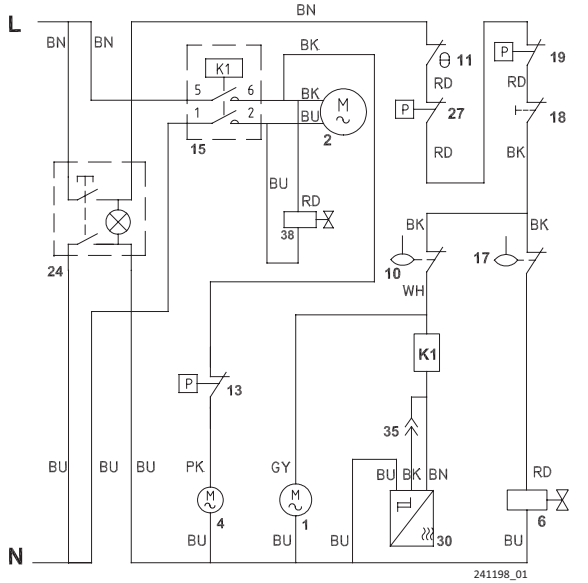

See page 144 for compressor start component wiring.

Wiring Diagram Legend RNF1100A Air-cooled

1	Gear Motor
2	Compressor
4	Condenser fan motor
6	Water inlet valve
10	Low water level safety
11	Bin thermostat
13	Fan cycle control
15	Contactor
17	Water level switch
18	Ice chute safety switch
19	High pressure cut out
24	On/Off switch
27	Low pressure cut out
30	Rotation sensor
35	Compressor time delay by-pass
38	Solenoid
Wire Color Designation	
B	White
BL	Blue
G	Grey
M	Brown
N	Black
R	Red
RS	Pink