
RNF1100W WATER-COOLED

Refer to Nameplate for Voltage Rating

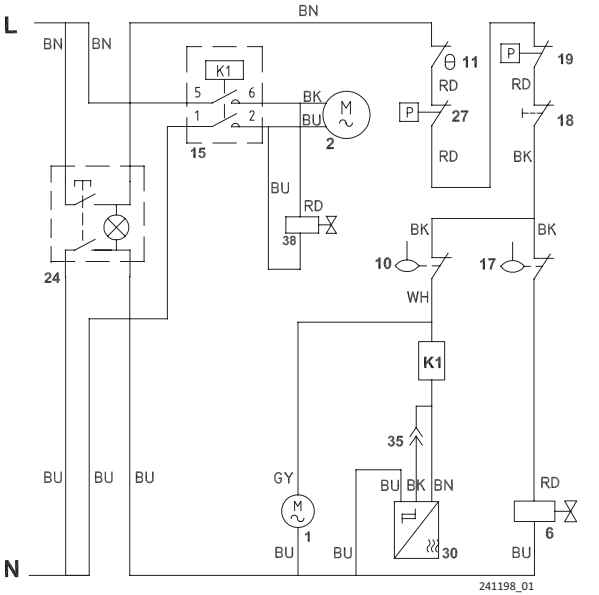

See page 144 for compressor start component wiring.

Wiring Diagram Legend RNF1100W Water-Cooled

1	Gear Motor
2	Compressor
6	Water inlet Valve
10	Low Water Level Switch
11	Bin Thermostat
15	Contactor
17	Water level switch
18	Chute safety switch
19	High pressure safety switch
24	On/Off switch
27	Low pressure safety switch
30	Rotation sensor
35	Compressor time delay by-pass (Service staff only)
38	Solenoid Valve
Wire Color Designation	
WH	White
BU	Blue
GY	Grey
BN	Brown
BK	Black
RD	Red
PK	Pink