
K00386 ADAPTER KIT

Installation Instructions

The K00386 kit is used for installing S-1470 or S-1870 ice machines on a C-730 bin.

1. Note: Bin must be level before installation of ice machine.
   A. Remove the foam tape from the front and sides of the bin where the stainless deflector will be located.
   B. Remove RH and LH hinge screws and bin door. Remove fillers and old deflector.
   C. Place the deflector on the front edge of the bin and align with front bin edge.
   D. Place the fillers on the bin, as shown. Make sure the two holes from the stainless deflector and fillers are aligned on the side.
   E. Apply foam tape to the front and back of the bin between the fillers. Note: All other required foam tape comes preassembled with the stainless deflector and fillers.
   F. Note: It is recommended to RTV intersections and along the inside edge of the foam tape to prevent water tracking.
2. Refer to ice machine installation manual for ice machine installation procedures.

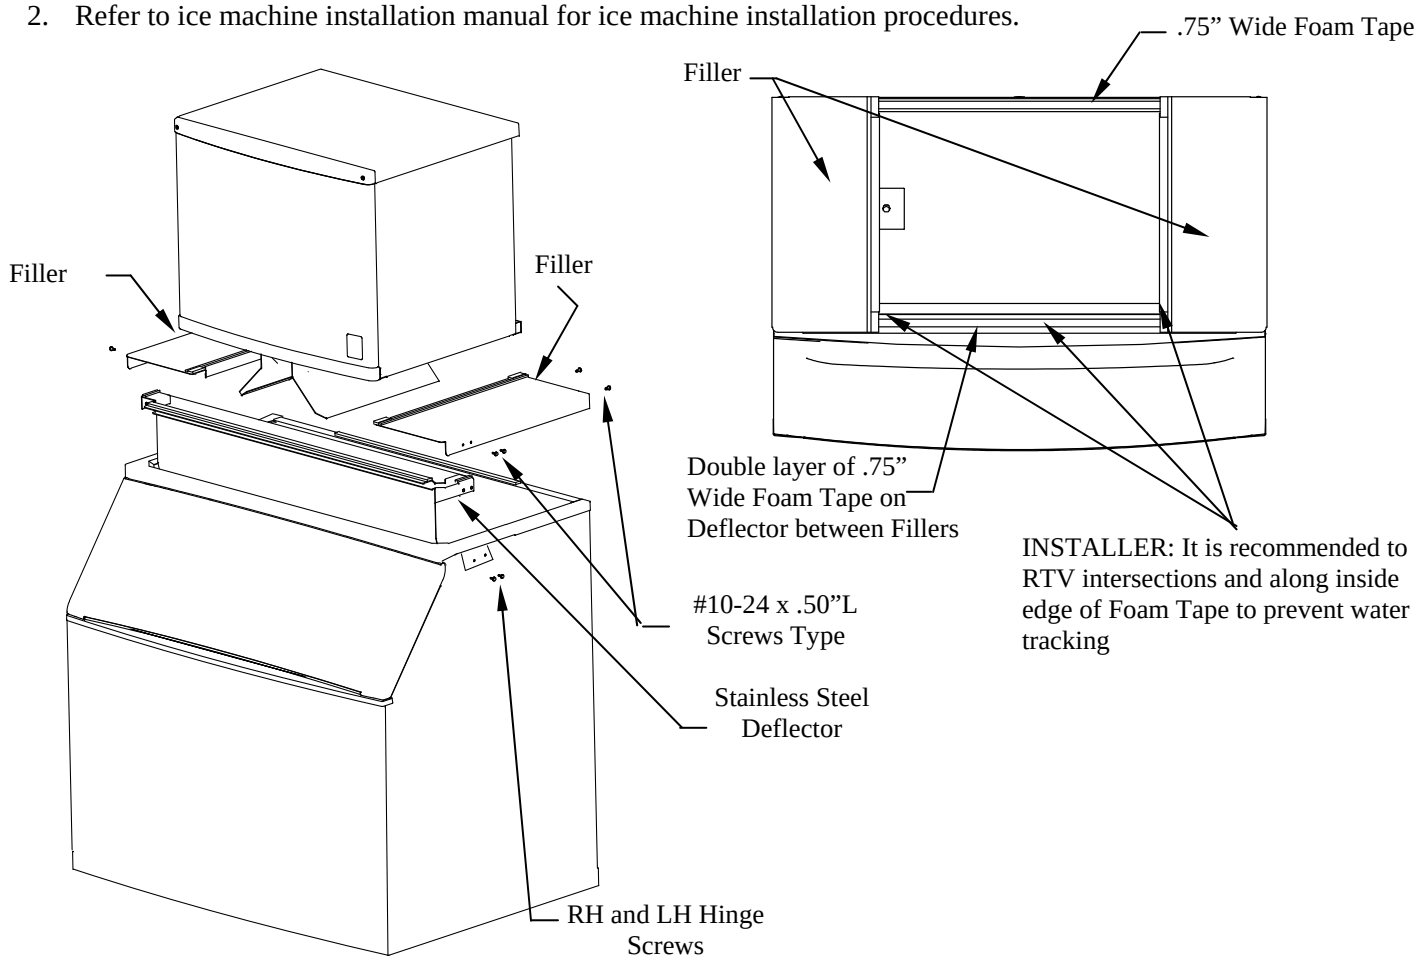

Manitowoc Ice, Inc.
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com

Installing Ice deflector

1. Locate correct position for the deflector.
   - If the ice machine is installed, remove the water trough to obtain easier access.
   - The deflector must be located in the center of the drop zone.
   - Location is 11” from the left edge of the ice machine to the left edge of the mounting bracket.
2. Cut and remove the foam tape on the front and back of the bin where the deflector will be located.
3. Remove any residual adhesive; areas must be clean and dry.
4. Remove protective covering from the two sided tape on each deflector bracket.
5. Install the deflector bracket.
   - Distribute the mounting bracket equally on the front and back of the bin.
   - Locate the retaining pin to the back.
   - Press the mounting bracket into place.
6. Trim supplied foam tape to length of cuts from step 2 and apply over the top of the bracket. Seal edges where deflector mounting bracket meets foam tape with silicone sealant to prevent water leakage.
7. Install the deflector into the mounting bracket.
   - Align tabs and slide the deflector toward the front of the bin.
   - Insert retaining pin into hole in the mounting bracket to lock deflector in place.
   - Reinstall water trough if removed in step 1.

