
PTCR Kit Installation Instruction

Components for change out:

PTCR bracket – 8504953
PTCR -8504913
Screw-5202063
Low Pressure Switch-4040
Wire harness -6525
Wire diagram-5135

Warning
Electrical power to the ice machine head section and CVD® condensing unit must be disconnected before proceeding.

1. Use a pinch-off tool to eliminate the need to recover the refrigerant charge and evacuate. Follow pinch-off tool manufacturer's instructions and remove the Low Pressure switch and install the new one (4040).
2. Remove the potential relay and the start capacitor.
3. Mount the PTCR bracket (8504953), screw (5202063) and PTCR (8504913) to the housing.
4. Wire with the new wiring harness per the wire diagram (5135)
5. Place the new wiring diagram (5135) over the existing wire diagram in the CVD condensing unit.

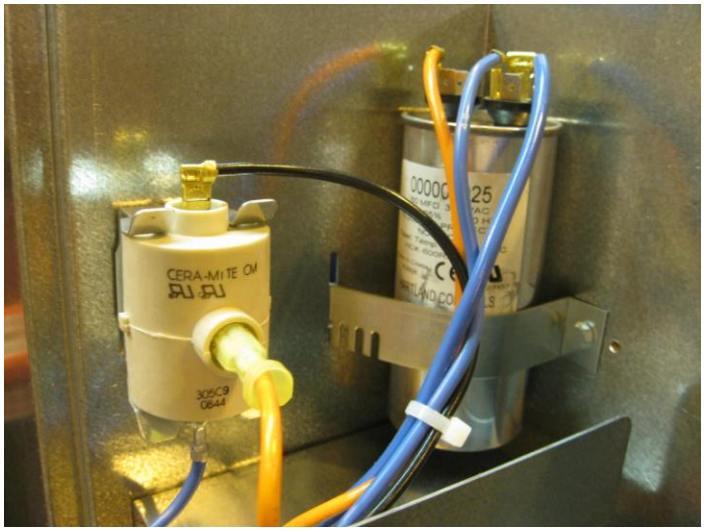

Manitowoc Ice
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com