MANITOWOC ICE MACHINE DIVISION
2110 SOUTH 26TH STREET, MANITOWOC, WI 54220

800-545-5720
WWW.MANITOWOCICE.COM

Installation Instructions

Subject: K00518 - Tamper Resistant Screw Kit

COMPONENTS

PARTS INCLUDED IN KIT



#1 STAINLESS STEEL WASHERS - QTY 2



#2 NYLON RETAINING WASHERS - QTY 2

#3 TAMPER RESISTANT SCREWS - QTY 2



#4 T15 SECURITY TORX BIT - QTY 1



#5 YUM LABEL - QTY 1



#6 AUTHORIZED TECHNICIAN LABEL - QTY 1



#7 SPLASH SHIELD LABEL - QTY 1

TOOLS REQUIRED







#1 PHILLIPS HEAD SCREWDRIVER



#2 MULTI-BIT SCREWDRIVER

PROCEDURE

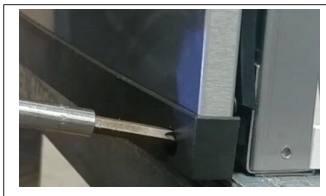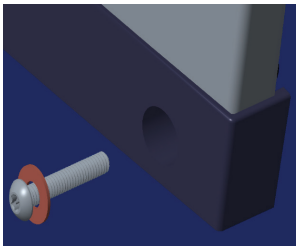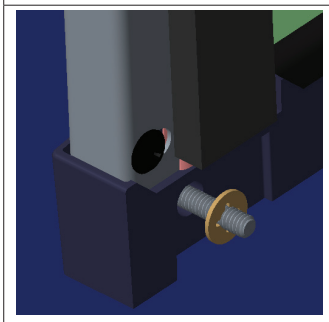
	1. Remove the two Phillips head front panel screws using the Phillips head screwdriver. Dispose of Phillips head screws. Lift up to remove front panel door.
	2. Install the two stainless steel washers (#1) onto the two tamper resistant screws (#3).
	3. Install tamper resistant screw and stainless steel washer through front panel door hole. Install nylon retaining washer (#2) onto screw threads on backside as shown. Repeat for other front panel door hole.

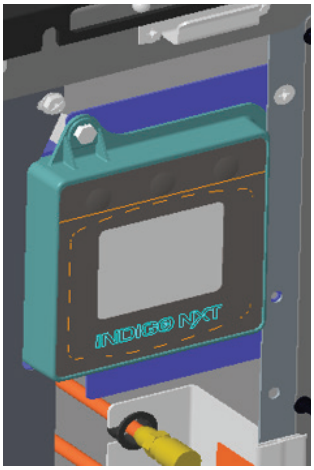

4. Activate Clean Minder on the display. Clean Minder is a feature that displays a cleaning reminder at a set time interval.

   A. Indigo NXT Models


      1. Unlock screen.
      2. Select Main Menu.
      3. Select Settings.
      4. Select reminders.
      5. Select clean reminder.
      6. Select On for Cleaning and Sanitize.
      7. Use arrow to set 6 month interval.
      8. Select home.
      9. Lock screen.

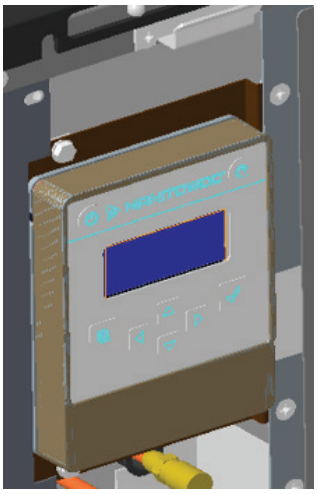


   B. Indigo Models

      1. Select main menu.
      2. Use the down arrow to select Set Up then press the check mark.
      3. Use the down arrow to select Clean Minder then press the check mark. Use the arrow to select Minder On then press the check mark.
      4. Use the down arrow to select Set Interval and press the check mark.
      5. Use the down arrow to select the 6 month interval and press the check mark.
      6. Use the down arrow to select Exit and press the check mark.
      7. Press Main Menu then press the left arrow to return to the home screen.

5. Please perform visual inspection on the following components. Record findings on question 8 of the digital survey.
   - Front Splash Shield (installed correctly?)
   - Interior Splash Shields (splash shields installed with mylar?)
   - Damper Doors (doors swings freely?)
   - Water Trough (trough stationary without movement?)
   - Water Level Probe (probe clean?)
   - Ice Thickness Probe (probe set for 1/8" bridge per instructions on inside door decal?)

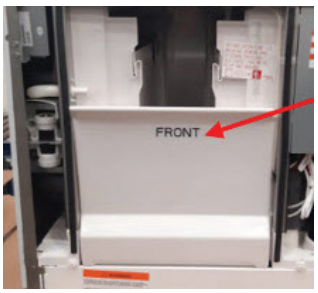


6. Orientate splash shield as shown in unit. Clean and dry splash shield before installing FRONT label (#7) as shown.

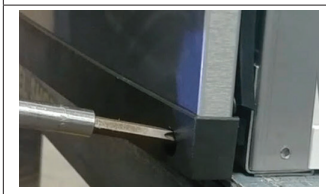

7. Re-install the front panel door by sliding door into upper channels.
   Confirm front panel door is hanging properly, then securely tighten both tamper resistant screws (#3) with the provided T15 Security Torx Bit (#4) using a Multi-bit screwdriver.

   *CAUTION - It is a UL requirement to properly install both front panel door screws.

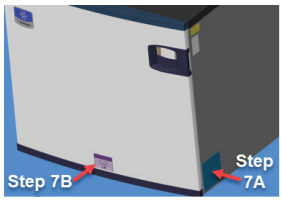	8. Install labels. A. YUM label (#5) on bottom corner of right side panel. B. Authorized Technician label (#6) on bottom middle of front panel door.
	9. Complete and submit the digital survey for each unit within each store location being retrofitted with tamper resistant screws and labels. A. Using any Generic QR Scanner, scan the QR Code (left) and start the checklist. B. To add a required photo: 1. Click on "Choose file" and then select "Take Photo or Video." 2. Take a photo and then select "Use Photo." C. Click "Done" when the checklist is complete.