
WATER FLOW CLAMP ASSEMBLY (SERVICE)

Installation Instructions

1. Remove front and top panels. Place toggle switch in OFF position.
2. Install "bar" clamp on hose, per installation diagram "A". Use 5/16" drill bit as gauge for proper setting.
3. Place product in ice production mode. Reinstall top panel, check for proper bridge thickness, and "fine tune", as required.

Diagram "A"

E0200, E0400, EO600,
E1100, G0600, G0800,
G1200, G1700, H0200

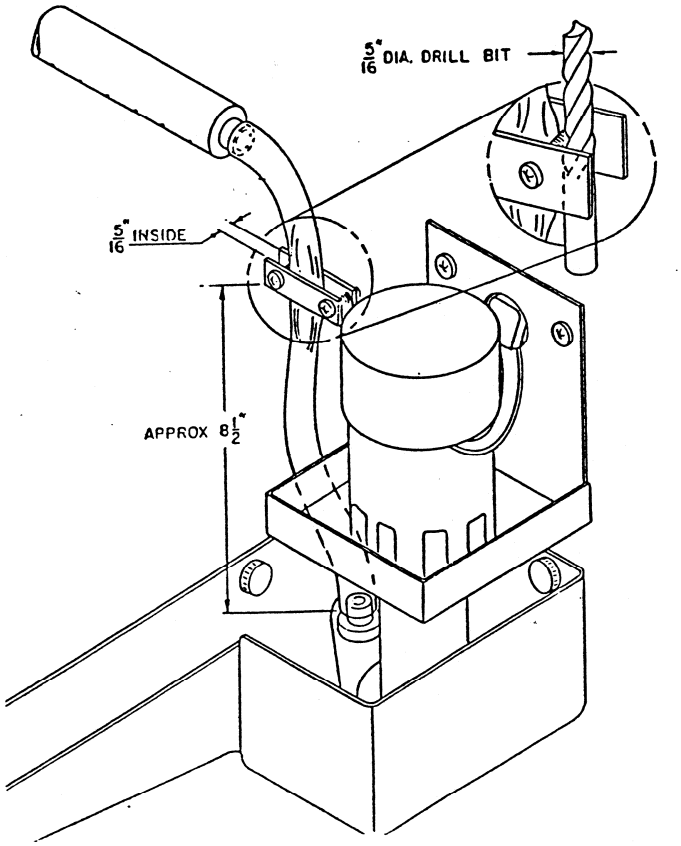

Manitowoc Ice, Inc.
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com

8001523
Rev. 08/22/03