
WATER TROUGH KIT INSTRUCTIONS

1. Drill three 1/8" diameter holes in the Cycolac panel, as shown.
2. Screw the machine screws through the Cycolac panel and into the rivnuts.
3. Slide the sump trough between the top rivnut and the bottom two rivnuts.
4. Turn the sump trough overflow elbow, as shown on the label included with this kit.

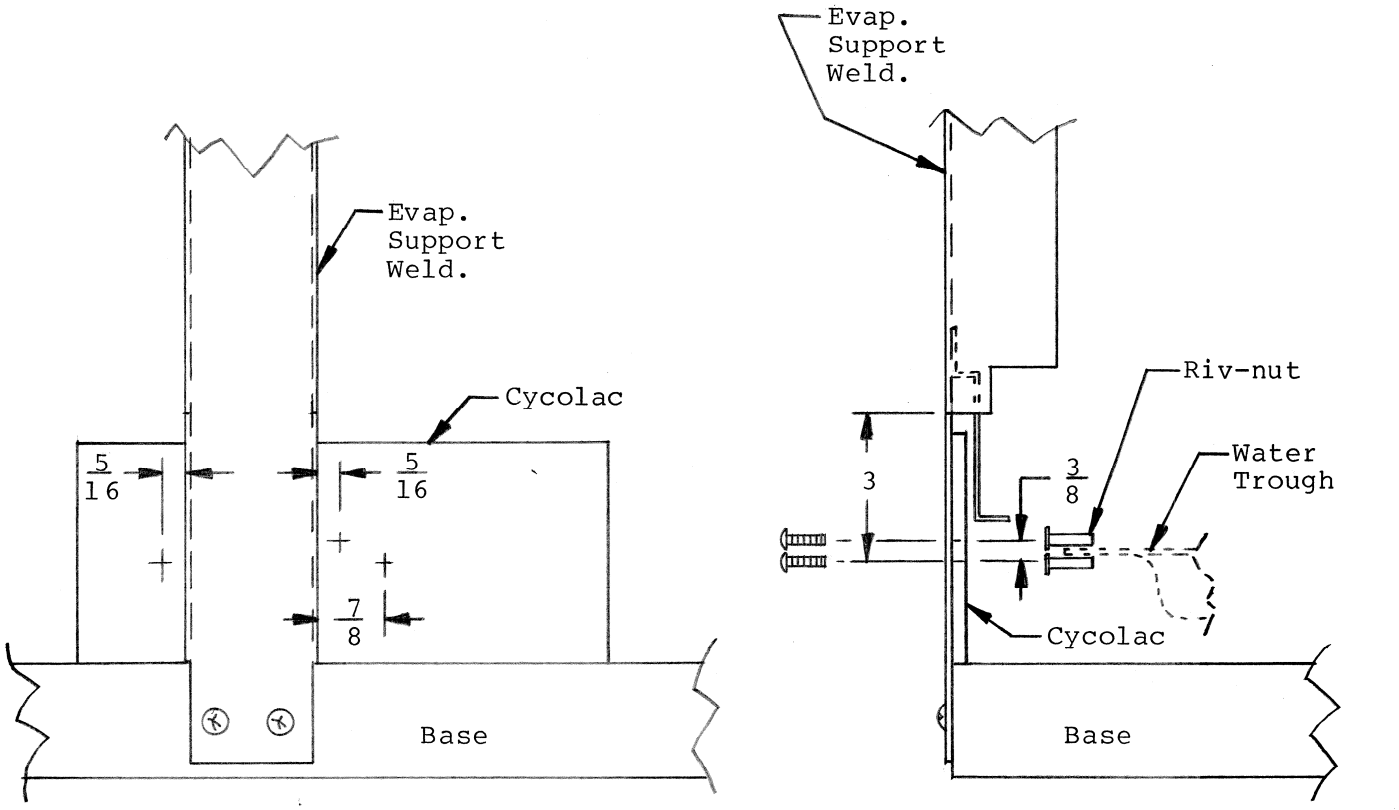

Manitowoc Ice, Inc.
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com
8003203
Rev. 10/16/03