
G-1200 & G-1700 EVAPORATOR REPLACEMENT

Mounting Instructions

Two nylon washers are being shipped along with the evaporator (see detail below). When mounting the evaporator, you will find that, on the partition panel and Rubatex insulation, there are six holes. Due to an engineering change, the six holes for mounting the right-hand front and rear evaporator brackets have been reduced to four (two holes in center will not be used). Slip the four washers over the studs of the brackets. When the right-hand evaporator brackets with the washers are being tightened, the nylon washers must rest flat onto the partition panel surface. Avoid Rubatex insulation being pinched underneath the washers.

Note:

The plastic bag contains three nylon washers. Two of these three washers are actually used for mounting each replacement evaporator. The nylon washer left over is being shipped in case one washer becomes lost.

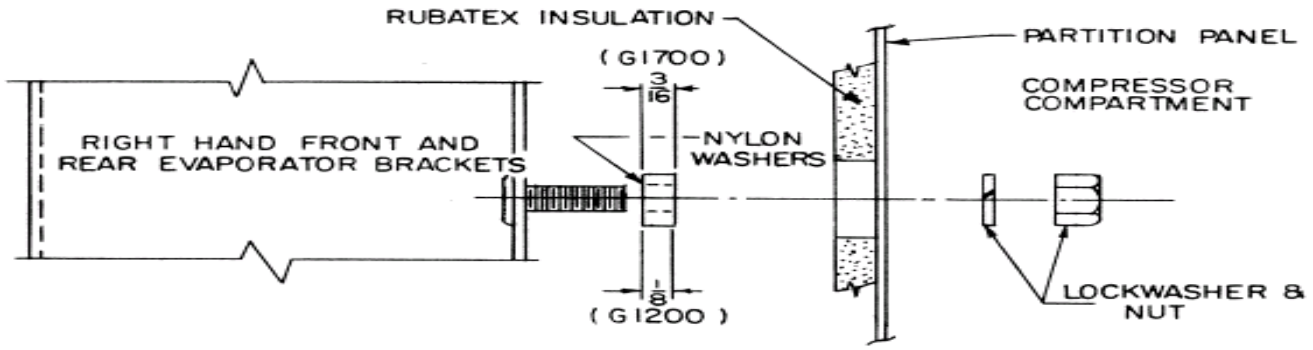

Manitowoc Ice, Inc.
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com
8003633
Rev. 07/07/03