
CONTACTOR

Installation Instructions

1. Remove control box cover.
2. Remove wires from relay.
3. Remove relay mounting screws and relay.
4. Install contactor using two TEK screws. The notch in the contactor is to be facing towards the right (see view).
5. Install strain relief, with remaining TEK screw, in remaining hole.
6. Connect lead wires, as indicated (see view).
7. Install with the new cover supplied. Use the existing cover mounting screws.

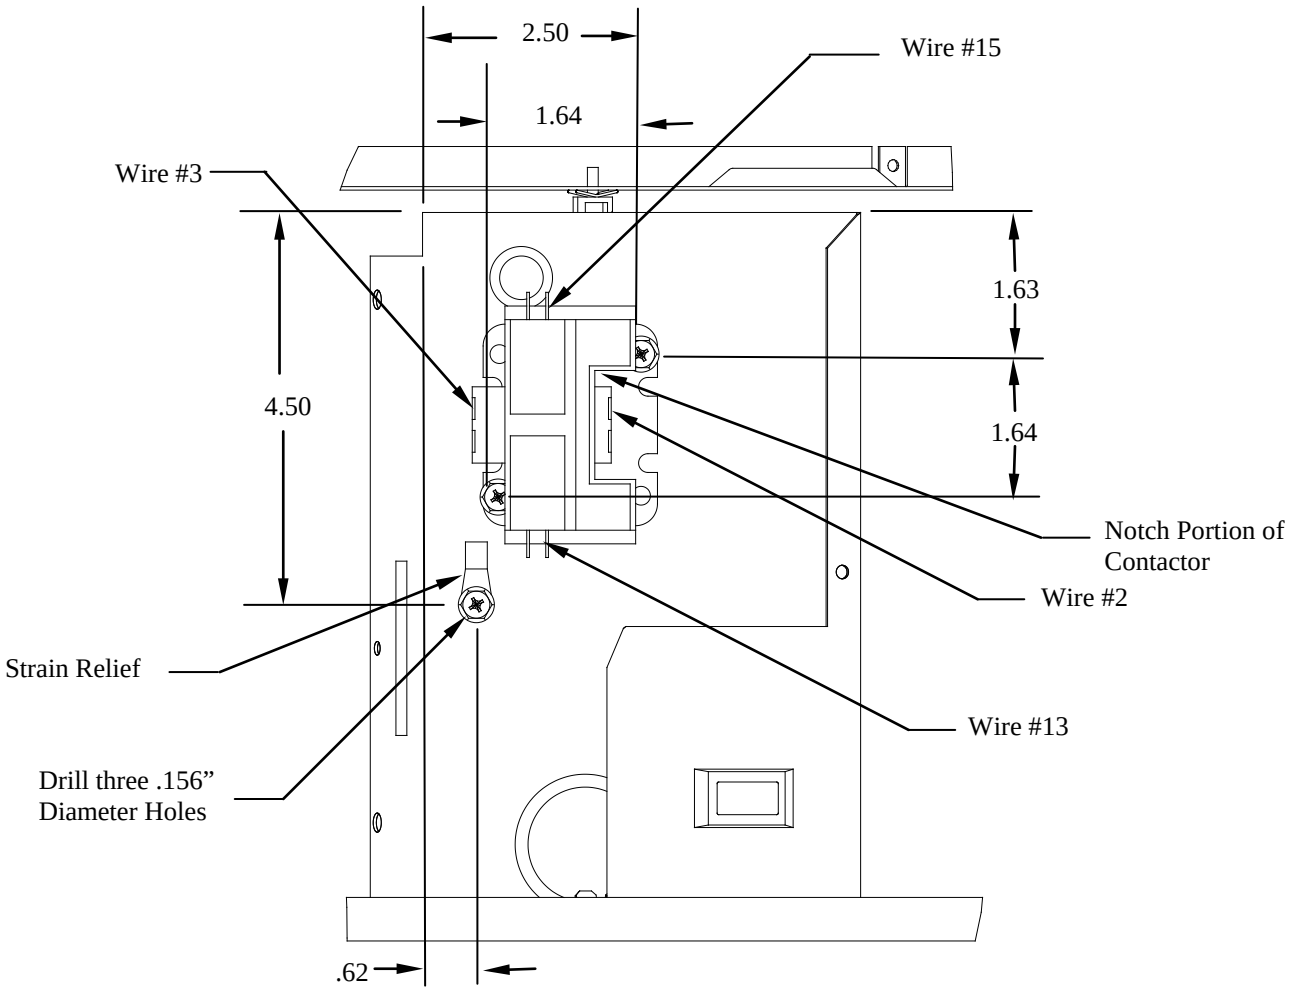

Manitowoc Ice, Inc.
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA