
7625583 FLARE NUT TXV REPLACEMENT (Z300)

Installation Instructions

1. Disconnect power from reach-in.
2. Recover refrigerant.
3. Remove armaflex insulation from existing expansion valve.
4. To remove expansion valve, loosen flare nuts from expansion valve.
5. With small tubing cutter, cut tubing just below flare nuts.
6. NOTE: WRAP NEW TXV WITH A WET CLOTH TO PREVENT OVERHEATING VALVE. Slip copper reducer into TXV outlet and swaged end onto existing line, install equalizer and inlet tube, and hand bend to fit into place. Sweat all joints into place. NOTE: MAKE SURE INLET TUBE IS CONNECTED TO CORRECT PORT, AS SHOWN WITH ARROW ON BODY OF VALVE.

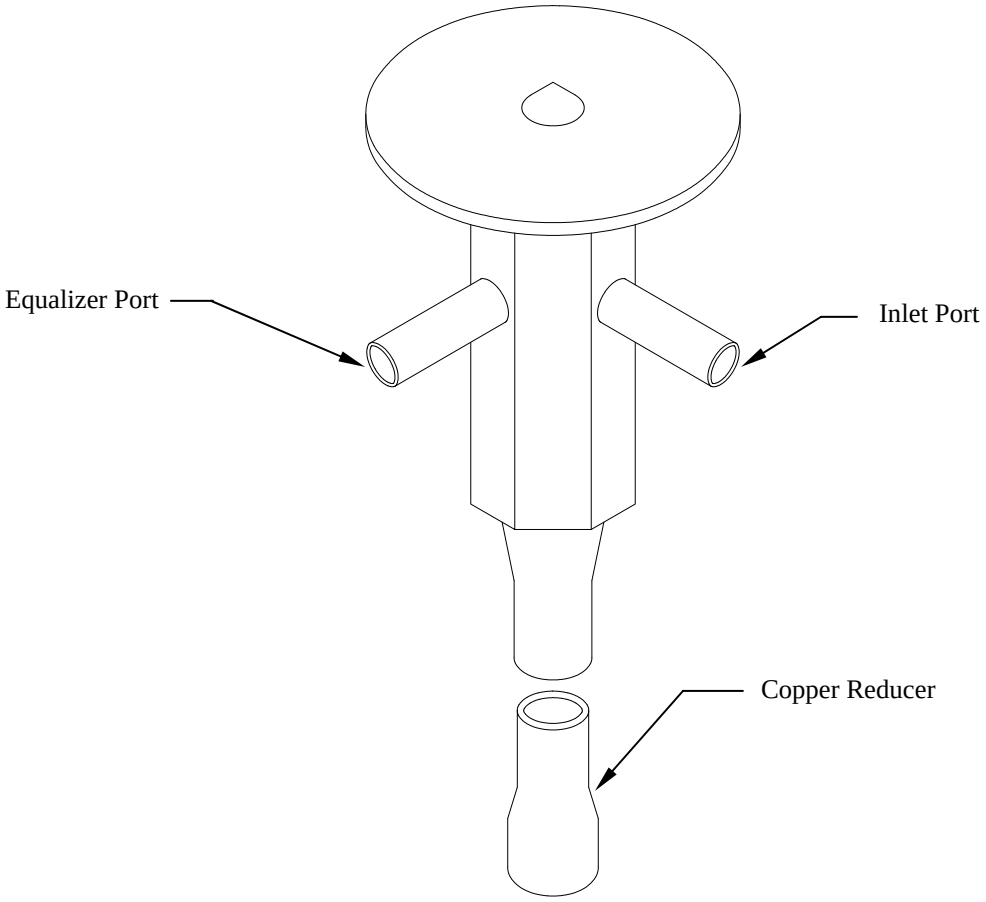

7. When TXV is cool, slip rubber boot over TXV and glue seam together.
8. Evacuate and weigh in proper charge.

Manitowoc Ice, Inc.
2110 South 26 Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com
8009623
Rev. 09/06/00