
K00139 ICE DEFLECTOR KIT

Installation Instructions

The K00139, ice deflector kit, must be used with the Q-1300 and Q-1800 ice machine, when the ice machine is used on a non-Manitowoc ice storage bin or dispenser.

1. Remove front panel.
2. Remove two thread-cutting screws from the left-hand bulkhead and three screws from the center bulkhead of the machine.
3. Install ice deflector with the five supplied thumbscrews, as shown.
4. Attach support gusset to right-hand side of ice deflector with the screw supplied. Mount gusset end with slotted hole to the back bulkhead with supplied thumbscrew.
5. Replace front panel.

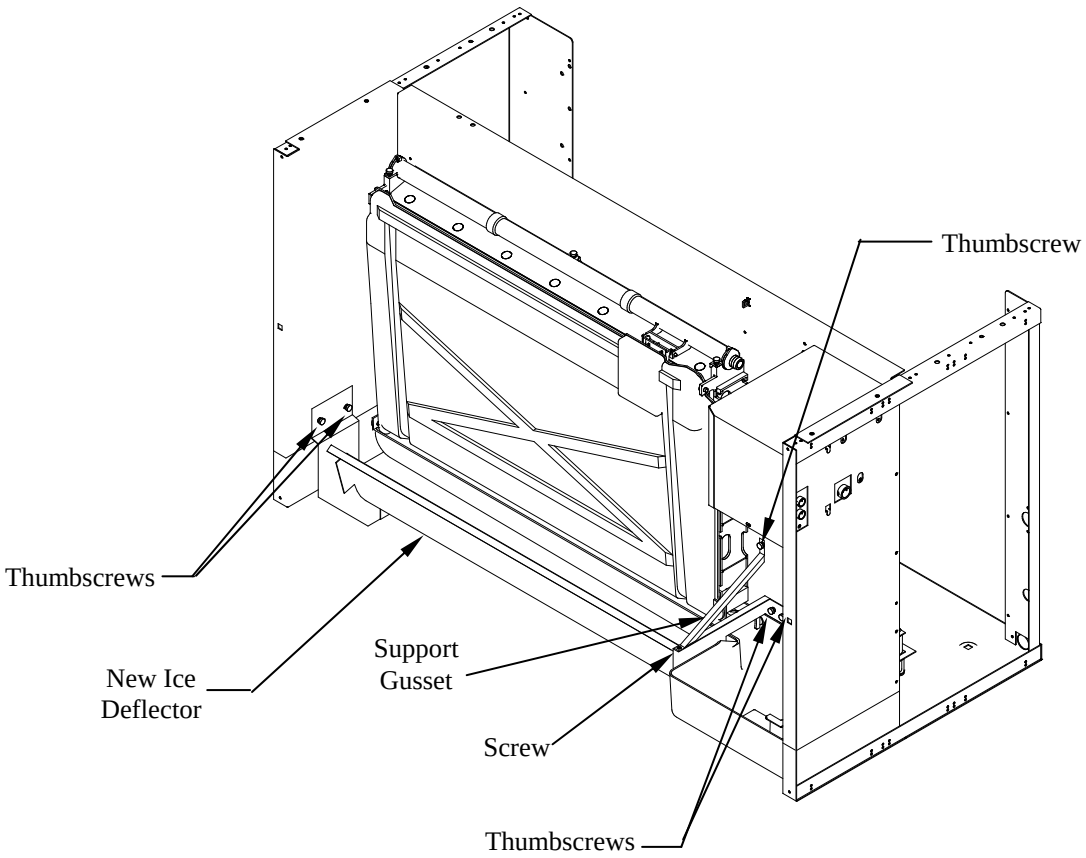

Manitowoc Ice, Inc.
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com

8011063
Rev. 06/13/03