
DRIP BRACKET

Installation Instructions

7629293 - Q-300 Series

1. Remove front door panel assembly.
2. Clean and dry plastic area of ice chute where the double-face tape contacts it.
3. Remove paper from the double-face tape on the bracket provided.
4. Place bracket onto ice chute, as shown in Detail A.
5. Replace front door panel assembly.

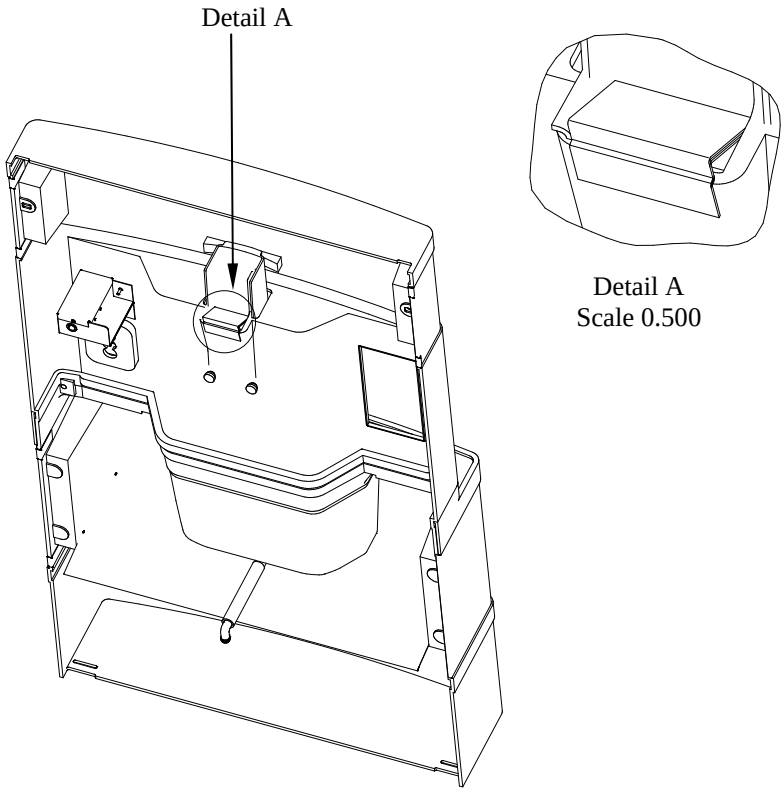

Detail A
Scale 0.500

Manitowoc Ice, Inc.
2110 South 26 Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com

8011563
Rev. 03/11/99