
RETAINER CLIP Q-DISPENSER S.S. WRAP

Kit Part Number 76-2925-3

Installation Instructions

1. Remove the two screws that hold the front panel in place and remove front panel assembly.
2. Position the panel so that you are looking at the backside.
3. Cut or peel away enough of the insulation to install the retaining clip.
   NOTE: See illustrations.
4. Clean surface, as necessary.
5. Remove the backing from the double-sided tape on the clip.
6. Position the clip 90° to the back panel.
7. Roll the clip to the inside of the panel pressing firmly on the tape.
   NOTE: Be sure that the clip slides over both the stainless side panel and the plastic edge of the front panel.
8. Repeat steps 3-7 for all clips.

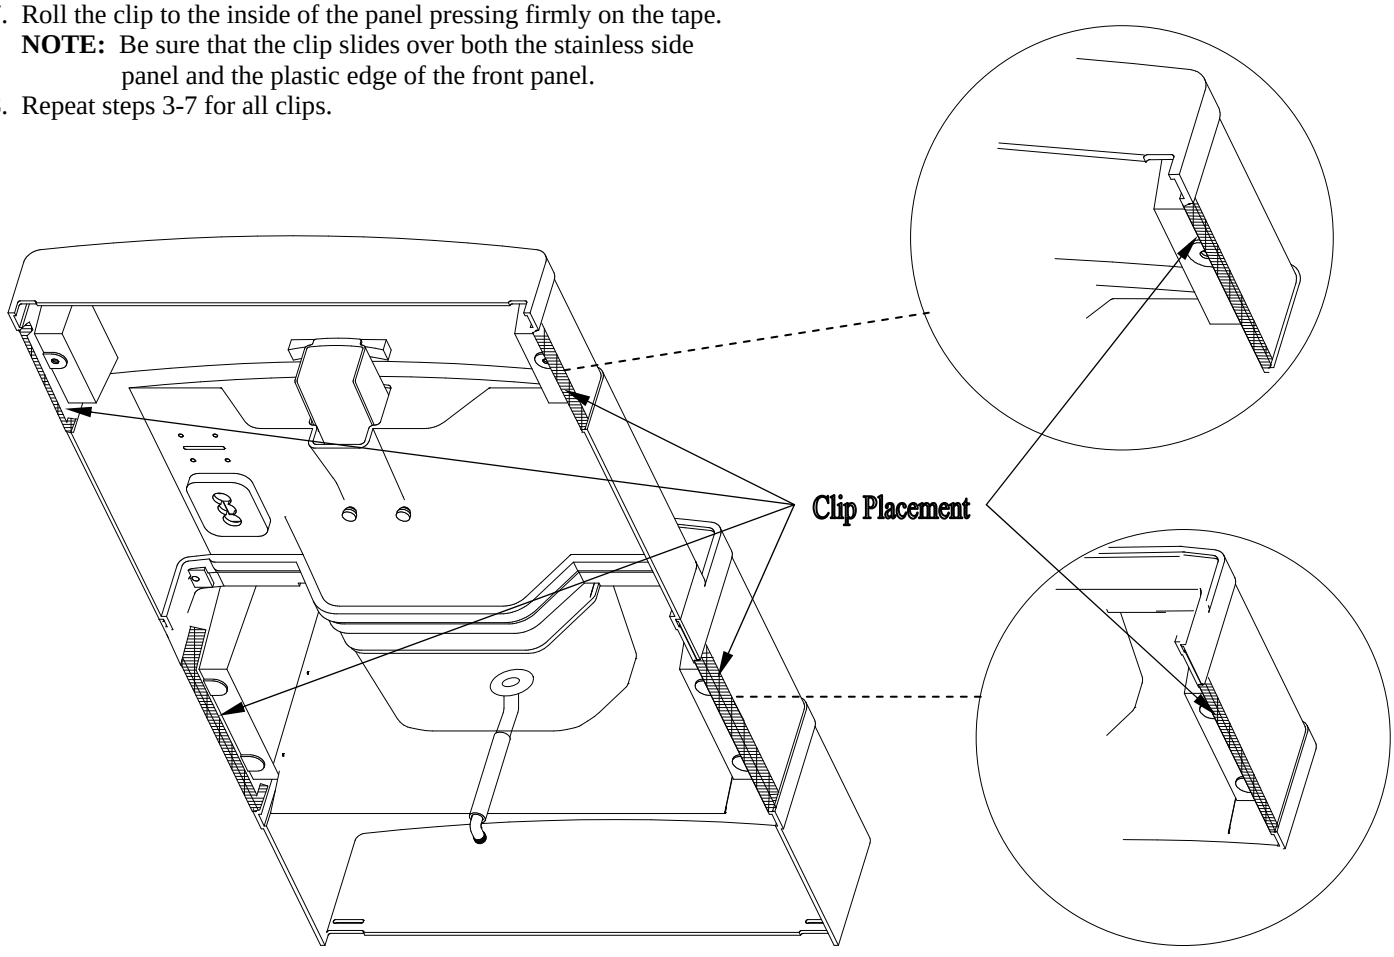

Manitowoc Ice, Inc.
2110 South 26 Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879

8011643
07/24/98