
DISTRIBUTION TUBE ASSEMBLY - QM-20/30

Installation Instructions

1. Remove current distribution tube or distribution tray from evaporator. (If replacing a distribution tray, also remove the P-clamp that fastens the water distribution hose to the top of the bin liner.)
2. Apply white RTV to top edge of evaporator to seal to bin liner. (If replacing distribution tray, also seal hole from old P-clamp on inside top of bin liner.)
3. Install new distribution tube to evaporator using existing thumbscrews.
4. Fasten water distribution hose to new distribution tube.

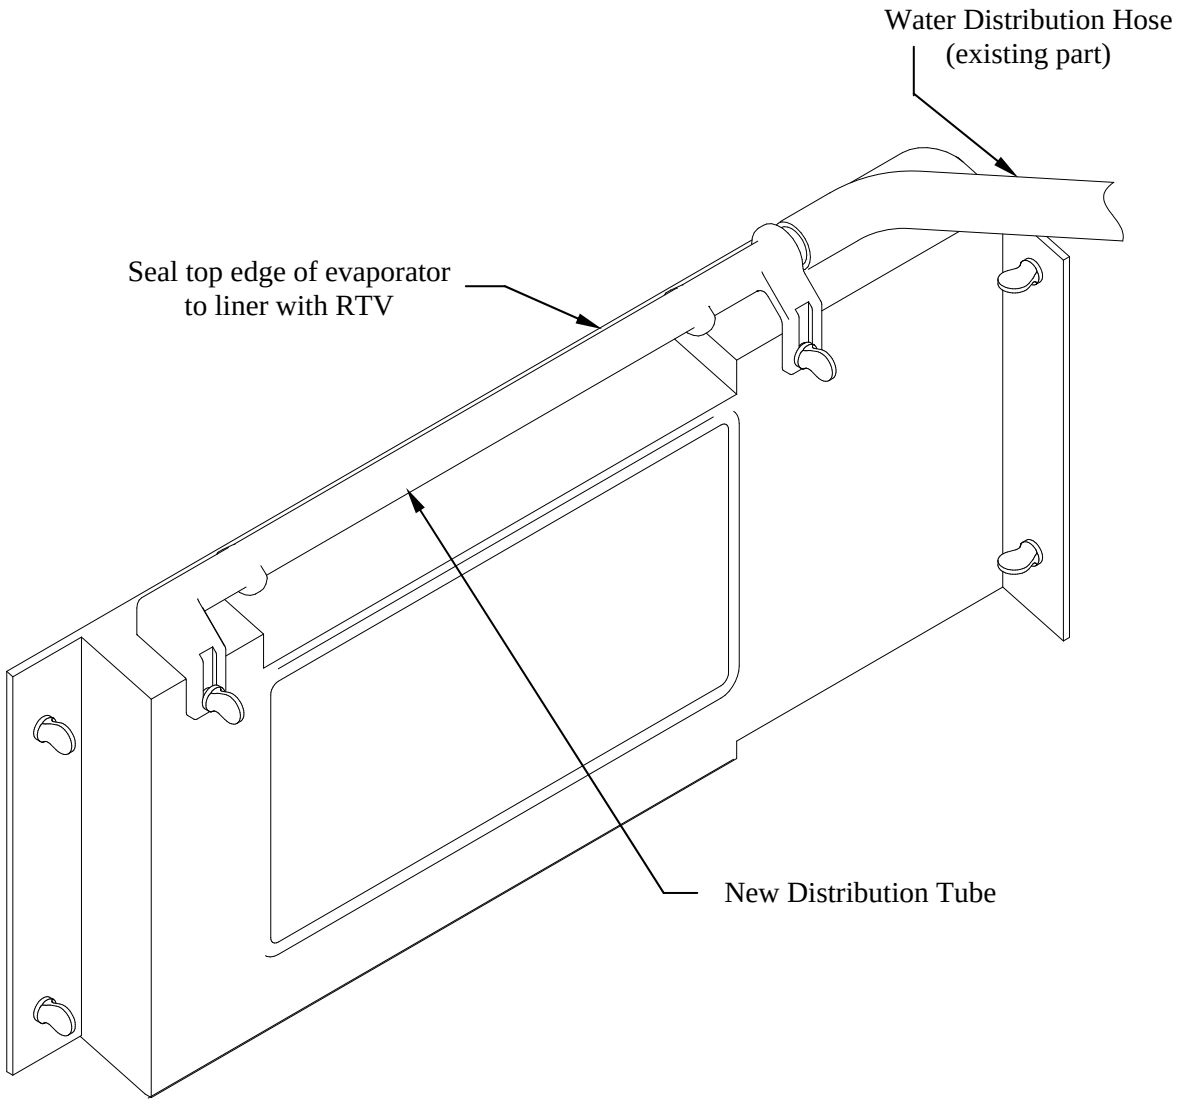

Manitowoc Ice, Inc.
2110 South 26 Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site- www.manitowocice.com
8011693
Rev. 11/09/99