
K00222 ADAPTER KIT

Installation Instructions

1. The K00222 kit is used for installing ice machines weighing less than 180 lb., Q-0280, Q-0450, Q-0600, Q-1400, and 30" S-series, on a Manitowoc S-970 bin.
2. Installation (bin or dispenser must be level before starting):
   A. Remove existing foam tape from top of bin or dispenser.
   B. Place support angle on bin or dispenser, as shown, prior to adapter installation. Locate foam tape from kit in the (A) positions on top of bin, as shown. Note locations of narrow and wide tape.
   C. Place adapters on bin or dispenser, as shown. Make sure the two holes from the support angle and adapters are aligned on the side.
   D. Using the adapters as templates, drill three 5/32" (4 mm.) holes, .500" (12.7 mm.) deep maximum, in bin or dispenser. **Warning: Do not drill through interior liner.** Attach with 10-24 x .500" screws provided.
   E. Apply foam tape to the edge of the adapters and on the front and back of the bin or dispenser between the adapters in the (B) positions. Note: It is recommended to RTV intersections and along front inside edge of foam tape (see drawing) to prevent water tracking.
3. Refer to ice machine installation manual for ice machine installation procedures.

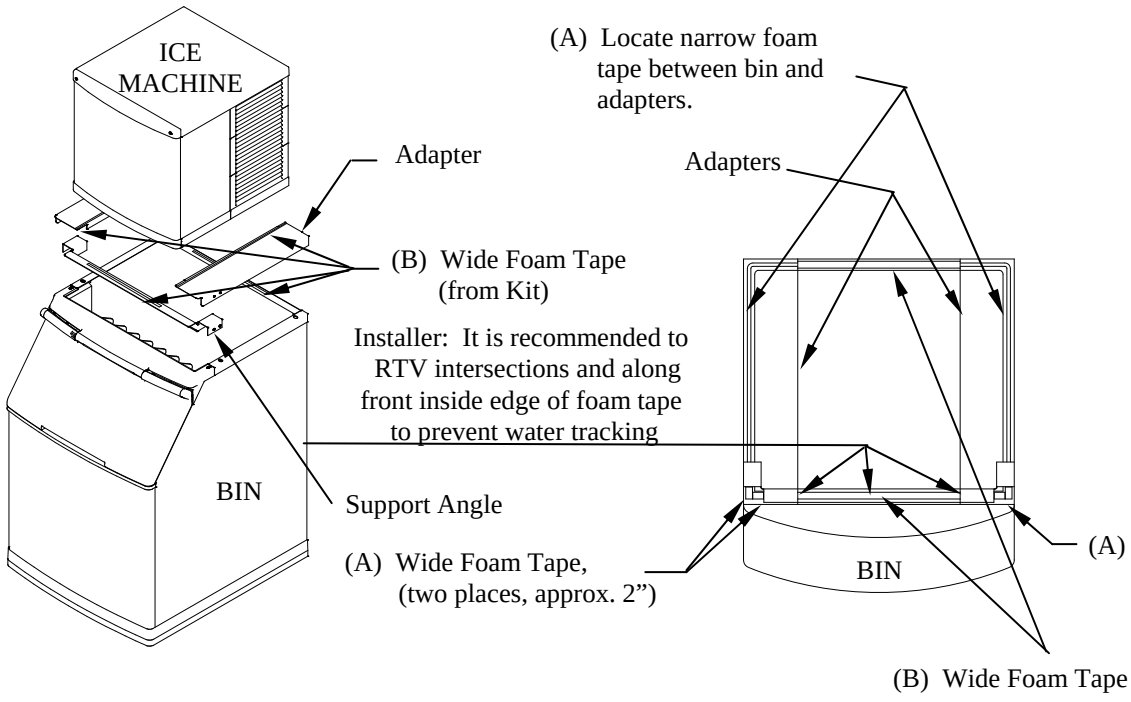

Manitowoc Ice, Inc.
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com

8014133
Rev. 05//12/04