

QF0400 Water Reservoir Support

Installation Instructions

The stainless steel strap included with this kit is the field replacement for all nylon straps.

1. Drain all water from the evaporator and reservoir (place toggle switch in ICE position for 45 seconds and then place in OFF position).
2. Disconnect power to the ice machine.
3. Remove all ice from bin.
4. Remove panels.

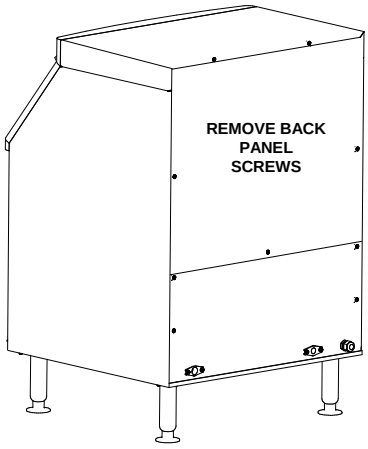

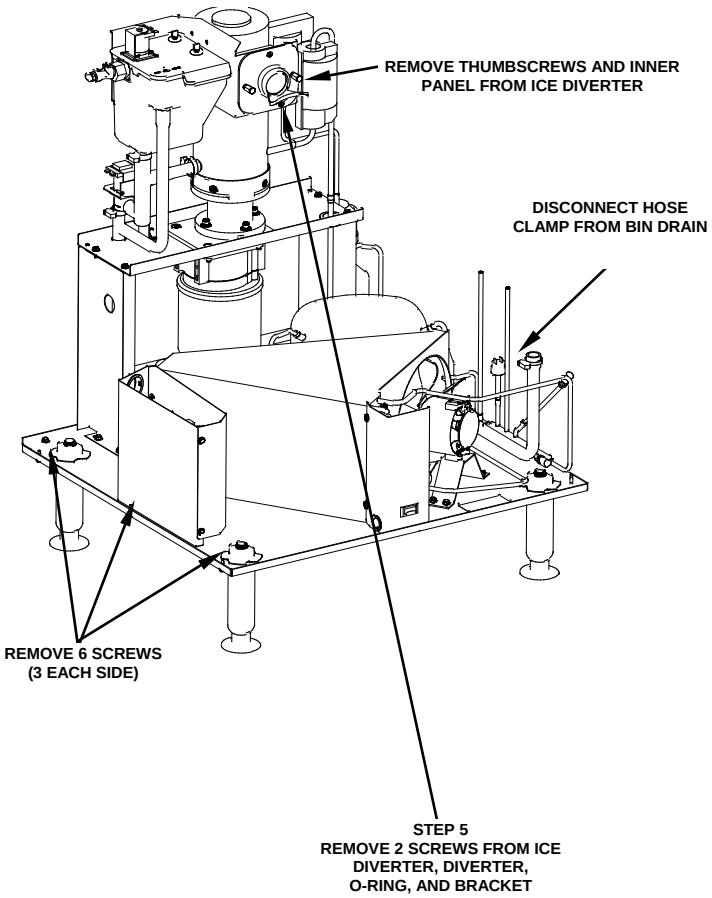

5. Remove two screws from the ice diverter; remove the ice diverter, and then the o-ring.
6. Remove the bracket from the evaporator spout and reservoir.
7. Remove nylon ties and thread one stainless steel tie through two upper holes and one through two lower holes.
8. Install water reservoir on bracket, bracket on evaporator spout, o-ring on evaporator spout, and then diverter. Install two screws removed in step 5.
9. Pull each stainless steel strap tight with a pliers and trim to length.
10. Early model ice machines had the diverter thumbscrews located top and bottom rather than side to side. Mark and drill two ¼" holes in the evaporator panel to allow reassembly. Reinstall all panels, restore power, and test run.

Manitowoc Ice, Inc.
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com

8014713
08/07/03