SOLENOID VALVE SHIELD

Installation Instructions

WARNING

Disconnect electrical power before performing this procedure.

1. Remove solenoid coil from the valve body leaving the wires connected.
2. Place Mylar shield over solenoid armature guide with the slotted side of the shield closest to you, as shown in Fig. 1.
3. Reinstall solenoid coil. Note: Solenoid coil must be snapped down completely. Be sure Mylar shield is not caught between solenoid coil and top of the solenoid valve body.
4. Pull the tabbed end of the Mylar shield up and over the solenoid coil and insert the tabs into the slots, as shown in Fig. 2.

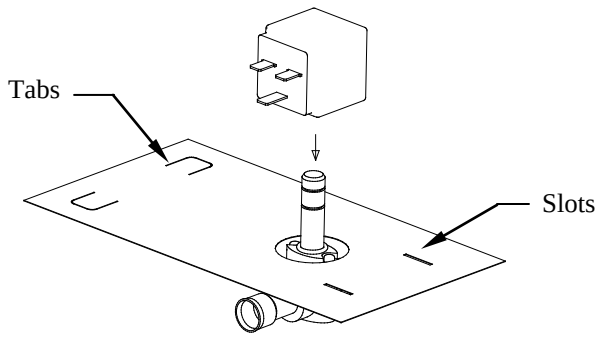


Fig. 1

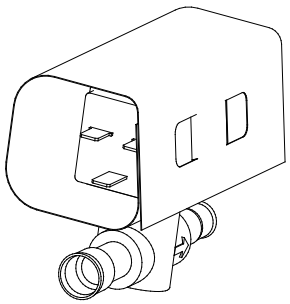


Fig. 2

Manitowoc Ice, Inc.
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com

8015083
11/24/03