MANITOWOC ICE
2110 SOUTH 26TH STREET, MANITOWOC, WI 54220
800-545-5720
WWW.MANITOWOCICE.COM

Instruction Sheet

Subject: K00346 Dispenser Baffle Kit

INSTALLATION INSTRUCTIONS


The K00346, dispenser baffle kit, must be used with the following ice machines when the ice machine is used on any ice beverage dispenser.

Indigo Models - I300, I450, I500, I606, I906, I1106

Koolaire Models - K250, K350, K500, K600, K1000

S Models - S300, S450, S500, S600, S850, S1000

1. Remove both front panels
2. Examine the ice machine to see if the machine has four screws on the lower front plastic panels (see drawing).
3. If there are screws, remove them from the countersunk holes on the front surface of the machine. Save the screws.
4. Install the deflector, using the four screws that were removed in step 3.
5. Four screws and two backing plates are in the kit.
6. If there are no screws on the ice machine (step 2), pierce the thin plastic countersunk holes, install the backing plates, and install the deflector, using the screws from the kit.
7. Replace the front panels.

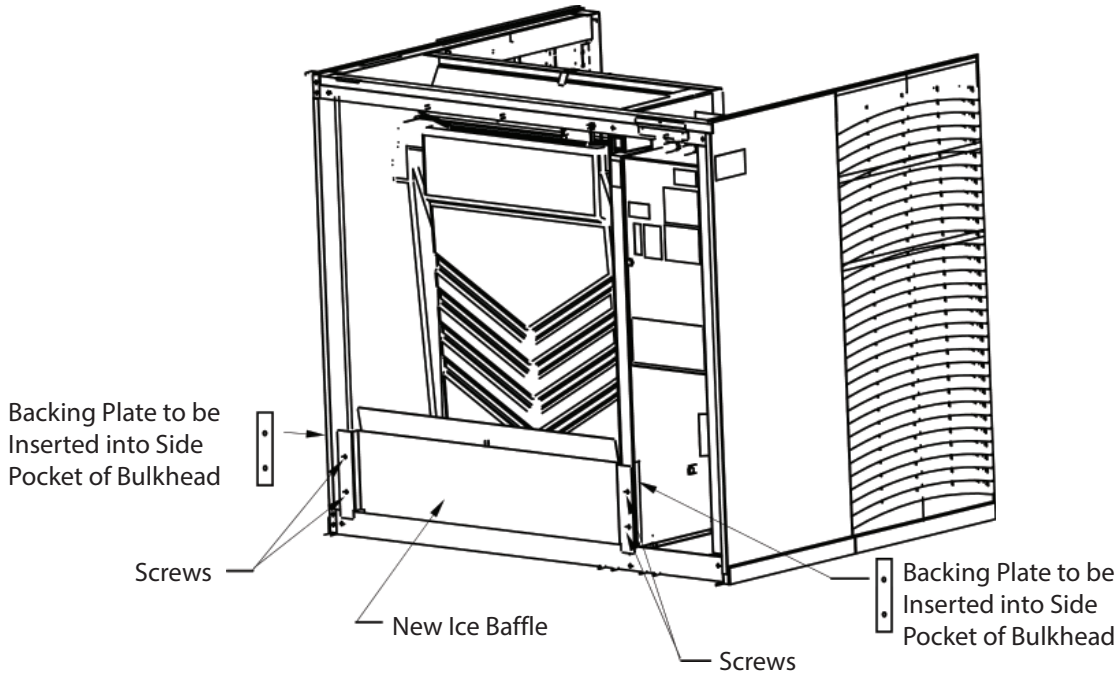

Document Number: 8015113 3/15