Manitowoc® **Parts & Service Communicator**

Subject: Water Inlet Valve Conversion Kits

Water inlet valve kits have been created to reduce the number of replacement water inlet valves.


Replacement Water Inlet Valve Kit Part Number	Obsolete Water Inlet Valve Part Number
000007965	76-0112-3 000000377 000000403
000007966	76-0113-3 000000378 000000380 000000404

Valve Modification Requirements Before Installation

Q MODELS & IB MODELS
No modifications are required.

S MODELS

1. Remove 4 screws, 3/8" NPT adapter/ bracket and o-ring.

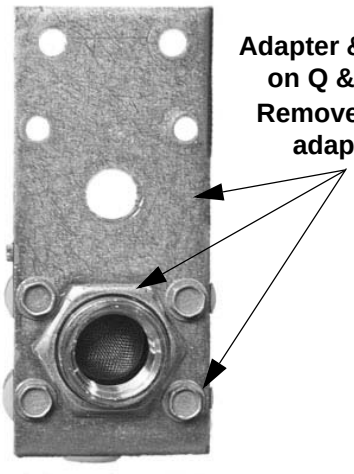


Adapter & Bracket are used on Q & IB Models only: Remove screws, bracket, adapter and o-ring.

2. Install o-ring and quick connect adapter from kit components and fasten with screws removed in step 1.

Install quick connect adapter, o-ring & bracket with screws removed in step 1.

Always reinstall shields (when used) to prevent electrical shock or premature coil failure.

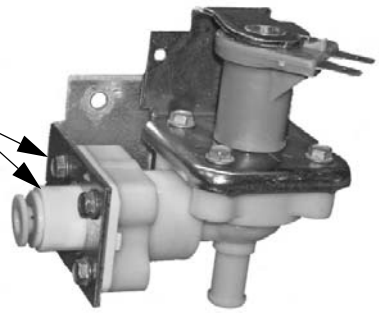

3. **S1200 / S1400 / S1800 Only:** Loosen screws securing electrical coil, rotate coil 1/4 turn clockwise, retightend screw.

4. **S1200C/S1400C/S1800C/S2070C/ S2174C Only:**

⚠ Warning

To prevent electrical shock hazard, reinstall the existing Mylar shield that protects the water inlet valve coil from moisture.