
SERVICE COMMUNICATOR

Subject: Q MODEL DISPENSER RETAINER CLIP

Q Model Dispensers incorporate two stainless steel wraps, which fold around the plastic edge of the front door. There have been instances of this wrap releasing from the plastic edge on some units with a serial number prior to 980700000. If this is encountered, there are stainless steel retainer clips available to secure the wrap in place.

Order part number 76-2925-3

This kit contains four stainless steel clips and mounting instructions. (A copy of the installation instructions are on the reverse side). The kit will be supplied at no charge through your local Manitowoc Distributor. Labor claims can be submitted for up to 30 minutes, through normal channels using the standard warranty labor claim form.

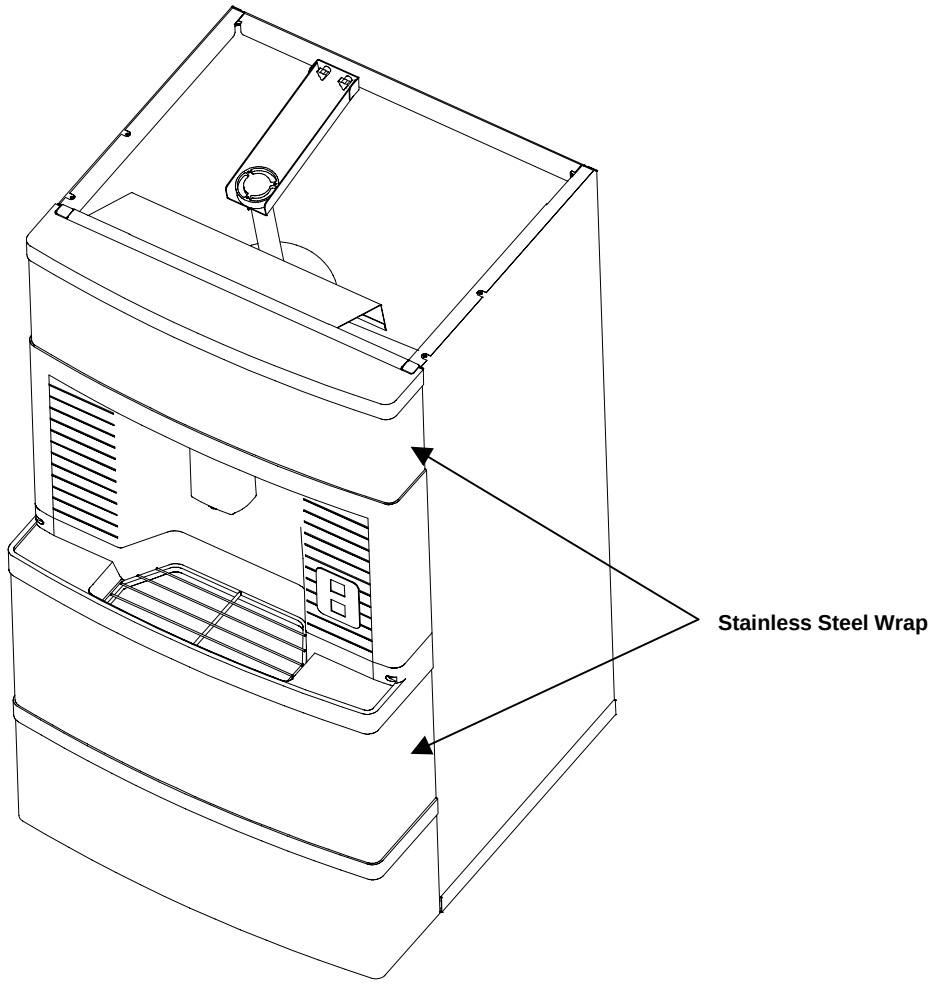

INSTALLATION INSTRUCTIONS
RETAINER CLIP Q-DISPENSER S.S. WRAP
Kit part number 76-2925-3

1. Remove the two screws that hold the front panel in place, and remove the front panel assembly.
2. Position the panel so that you are looking at the backside.
3. Cut or peel away enough of the insulation to install the retaining clip.
   NOTE: See illustrations
4. Remove the backing from the double-sided tape on the clip.
5. Position the clip 90 degrees to the back panel.
6. Roll the clip to the inside of the panel pressing firmly on the tape.
   NOTE: Be sure that the clip slides over both the stainless side panel and the plastic edge of the front panel.
7. Repeat steps 3-7 for all clips.

