
7602719
TOP EVAPORATOR FRAME
Replacement Instructions

Use kit, 7602719, to replace top evaporator frame on all S-0300 and S-0420 ice machines. Kit includes all necessary hardware:

Top evaporator frame
Tube silicone sealant
Top frame disks
Brass nuts
Instructions

Replacement Instructions:

1. Put ICE/OFF/CLEAN switch to the OFF position.
2. Remove water curtain, evaporator top cover, and water distribution tube from evaporator.
3. Using a small flat screwdriver, chip out all top frame disks. **IMPORTANT**: Be careful not to damage nuts and evaporator studs beneath disks.
4. Remove all 11/32" brass nuts; lift top evaporator frame from evaporator.
5. Remove excess silicone sealant from top corners.
6. Install new top evaporator frame on evaporator. Tighten brass nuts.
7. Fill mounting holes with silicone sealant. Insert new top frame disks and clean off excess silicone sealant. *NOTE: Any residue may result in poor water flow over evaporator*.
8. With silicone sealant, seal corners where top evaporator frame meets side brackets. **IMPORTANT**: Allow one hour for silicone sealant to dry.
9. Replace water distribution tube, evaporator top cover, and water curtain.
10. Put ICE/OFF/CLEAN switch to ICE position and verify ice machine is operating properly.

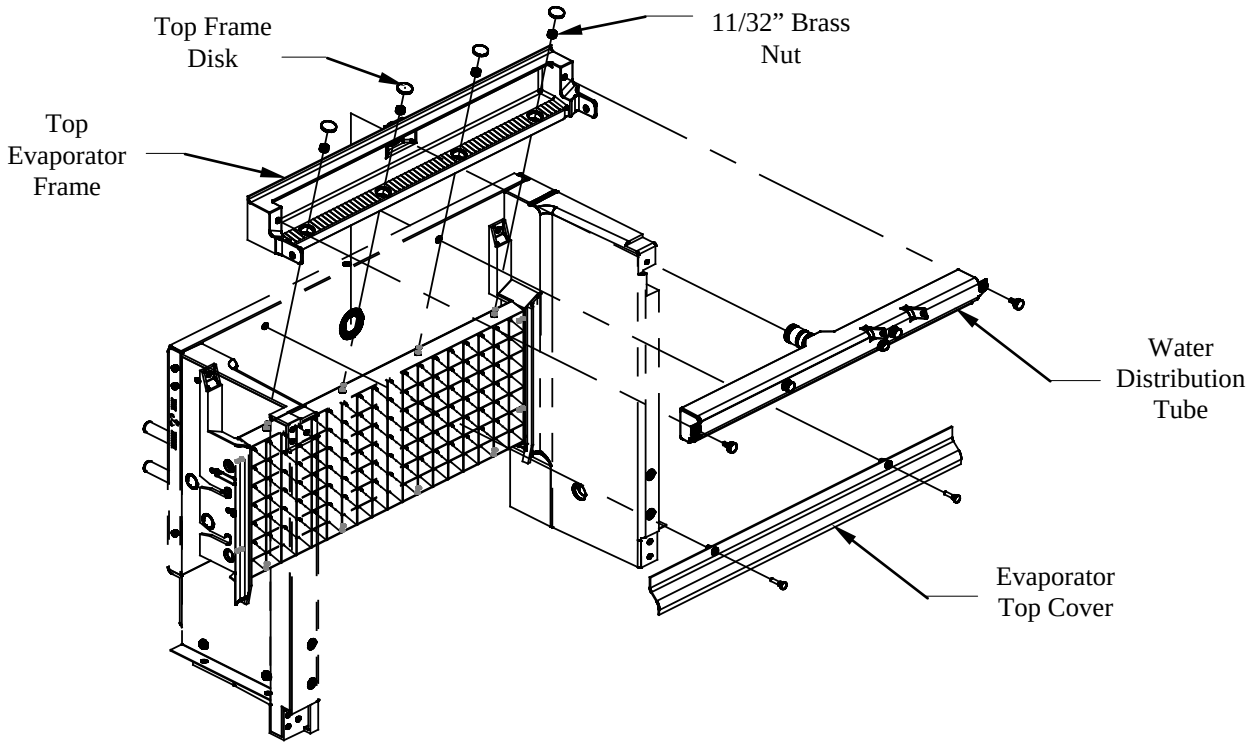

Manitowoc Ice, Inc.
2110 South 26th Street, P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone 920-682-0161, Fax - Sales: 920-683-7589, Service/Parts: 920-683-7585, Other: 920-683-7879
Web Site - www.manitowocice.com

8016053
08/09/04