MANITOWOC ICE
2110 SOUTH 26TH STREET, MANITOWOC, WI 54220
800-545-5720
WWW.MANITOWOCICE.COM

Service Bulletin

Subject: Sotto Wash Mode Changed UG--20/30/40/50/65/80 MODELS

Sotto Ice Machines:

The control board and toggle switch on Sotto Ice machines has been changed. We believe this change will make our ice machines easier to operation, easier to service and more reliable.

Details:

1.The new toggle switch has a spring on the “WASH” position, which will prevents accidentally activating an undesired wash cycle.


2.The new toggle switch can only be used with the new control board.

3.Because of different sizes, the current toggle switch and new toggle switch are NOT interchangeable.

4.The current toggle switch & control board will continue to be available as service part.

5. Related Part No.

Description	Current Part No.	New Part No.	Serial Number Break
Control Board	040002984	040005521	310370499
Toggle Switch	2301513	040005440	

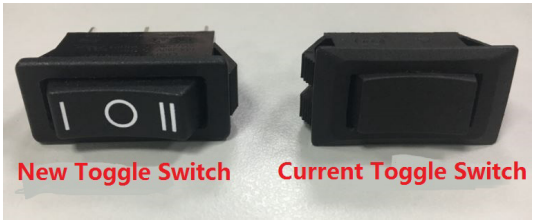

6. **Operational changes:**

Start a standard cleaning & sanitizing cycle: Press the toggle switch to WASH position and hold for 5 seconds.

Start a rinsing cycle: Wait until the cleaning cycle or sanitizing cycle is complete (approximately 13.5 minutes).Remove water curtain, ice chute and over flow tube from the water sump. Allow all water to drain from the sump. Replace drain plug.Press the toogle switch to WASH position and hold for 5 seconds to start a rinsing cycle.

NOTE: To termiante a standard wash cycle,press the toggle switch to WASH position and hold more than 30 seconds.



⚠ Caution

If the cleaner/sanitizer solution has been poured into the water trough, then the standard cleaning cycle must be completed. Don’t terminate the cleaning cycle, or the ice machine will not purges the remaining cleaner/sanitizer solution from the water trough.