MANITOWOC ICE
2110 SOUTH 26TH STREET, MANITOWOC, WI 54220

800-545-5720
WWW.MANITOWOCICE.COM

Service Bulletin

Subject: Aftermarket Hail Guard Mounting

ROOFTOP - REMOTE CONDENSERS & CONDENSING UNITS

⚠Warning

Authorized Service Representatives are obligated to follow industry standard safety procedures, including, but not limited to, local/national regulations for disconnection / lock out / tag out procedures for all utilities including electric, gas, water and steam.

NOTE: Hail Guards are not available for purchase from Manitowoc Ice.

Hail Guards must be removed prior to servicing the unit.

Use #10 x 24-0.5” screws (part number 5202069) to properly mount hail guards.

Safely drill into the recommened area for your unit.

Avoid all electrical and refrigeration connections.

FOLLOW ALL LOCAL CODES

Installation must comply with all applicable equipment fire and health codes with the authority having jurisdiction.

Verify the location and installation meets the local/national mechanical codes and stability requirements.

INSTALLATION AND MAINTENANCE

- Guards should be installed and serviced only by qualified personnel, whether for new installation or retrofitting.
- Guards should not be placed directly against fins.
- Guards should be fastened securely to prevent movement during high-wind events.
- Guards should be monitored for any reduction in airflow to minimize compressor failure.
- Guards should be kept clean and free of debris.
- Routine inspection may be required to ensure proper air flow.


⚠Warning

Drilling outside of the dedicated area will cause damage to the air condenser of the unit. Drill areas on next page.

TRADITIONAL REMOTE CONDENSERS
JC/JCF/JCT/KC SERIES

Horizontally mounted air condenser.

Up Flow.

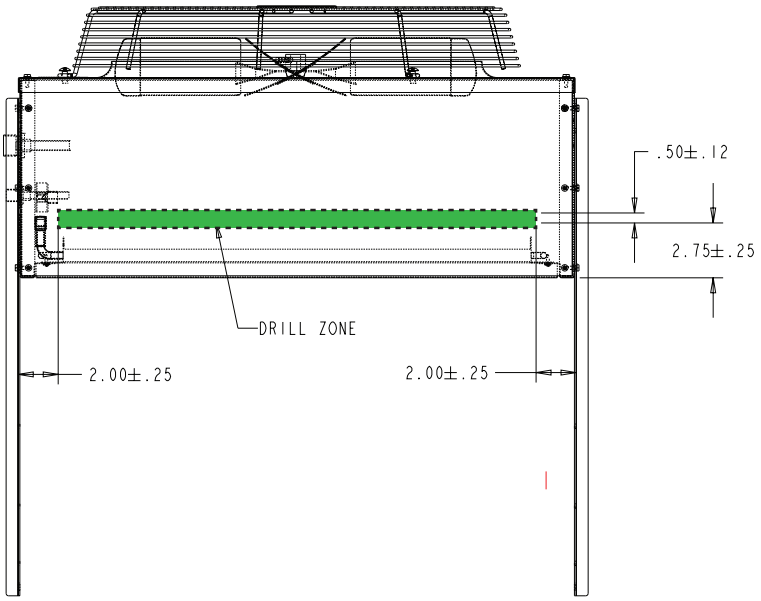

CONDENSING UNIT
CVD/CVDF/CVDT/ICVD/RCU/RCUF/RJC SERIES

Vertically mounted air condenser.

Cross Flow.

