
Manitowoc® Parts & Service Communicator

# Subject: Bin Thermostat Adjustment for High Altitudes

The bin thermostat stops the ice machine when the bin is full. It is preset for normal ambient temperatures. If the machine is installed at a high altitude (above 1500 meters) and the ice machine runs after the bin is full, ambient temperatures are probably low and the bin thermostat must be adjusted as follows:

### Test the Bin Thermostat

1. Place three ice cubes on the thermostat tube for 5 minutes, the ice machine stops the thermostat is functioning correctly. The ice machine should restart 5 minutes after the cubes are removed.

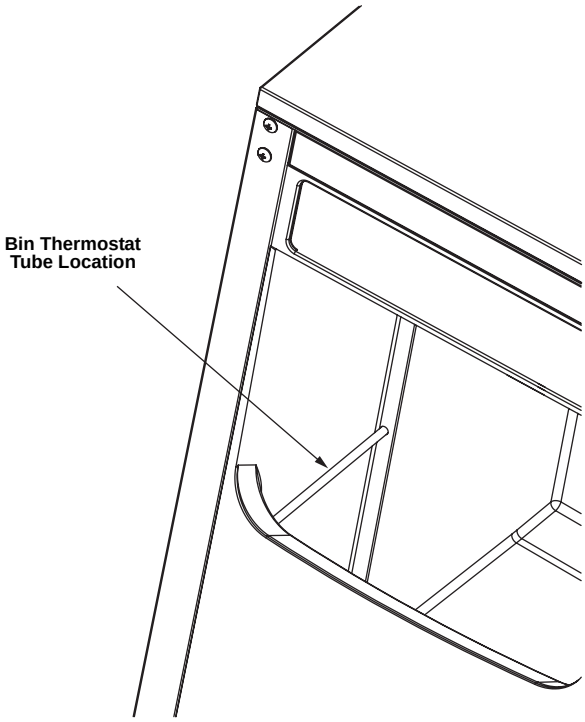



**⚠ Warning**

HAZARDOUS MOVING PARTS


Power is supplied to ice machine during this procedure. Avoid contact with the fan blade and the electrical connections.

### Adjusting the Bin Thermostat Dial

1. To access the thermostat, remove the two screws attaching the front grill and remove the grill.
2. Remove the lower white plastic panel by pulling straight down.

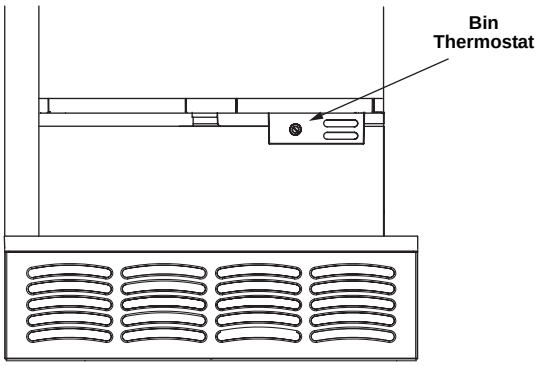


3. Turn the thermostat dial all the way to the left to decrease the level of ice before automatic shut-off.
4. If the thermostat still won't shut the machine off remove the thermostat from the machine and turn the screw on the side of the thermostat (which is attached to the spring) counterclockwise, one full turn. This will decrease the temperature 2 degrees.

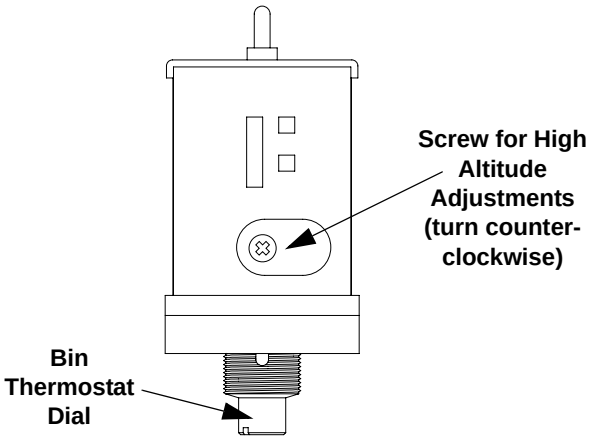


5. Test the bin thermostat as previously described.
6. If the machine does not stop proceed with half turn increments until the proper setting is achieved.
7. Reassemble the plastic panel and grill.

**MANITOWOC ICE, INC.**

Address - 2110 S. 26th St., P.O. Box 1720, Manitowoc, WI 54221-1720 USA
Telephone - 920-682-0161 • Service Fax - 920-683-7585 • Web Site - www.manitowocice.com